


# Lexus Personalized Settings

Your vehicle includes a variety of electronic features that can be programmed to your preferences. Programming of these features is performed once at no charge by your Lexus Dealer provided you obtain the service at the 6 month/5,000-mile scheduled maintenance service.




It is also possible to customize certain vehicle features yourself using the multi-information switches.

## Vehicles without Navigation system:

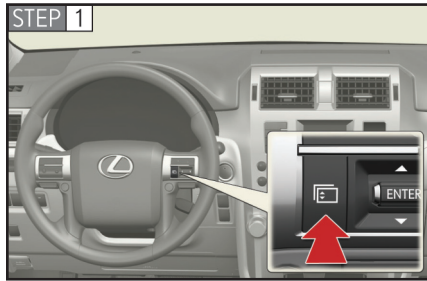

Press and hold the button on the steering wheel to display vehicle customization mode.

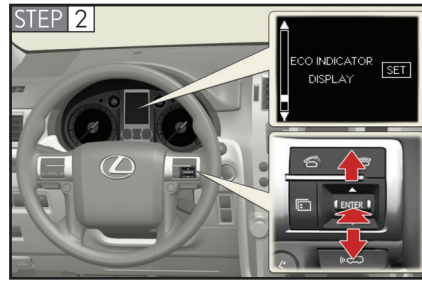

- 1 Toggle the switch up or down to select the item to be customized.
- 2 Press the switch to confirm.






















Please refer to the 2010 GX 460 Quick Guide, or Owner's Manual for more information on how to operate the multi-information switches.

Vehicle must be in "ON" mode to program personalized settings.

|   | Settings that can be customized by: |        |
|---|-------------------------------------|--------|
|   | Using the multi-info switches       | Dealer |
| <b>1. Speed Sensitive Auto Lock</b><br>When the vehicle reaches 13 mph:<br><input type="checkbox"/> The doors will not lock. (Standard) = Off<br><input type="checkbox"/> All the doors will automatically lock. = On   |                                     |        |
| <b>2. Shift-Linked Automatic Lock</b><br>When the vehicle is taken out of park and placed into another range:<br><input type="checkbox"/> The doors, if unlocked, will not automatically lock. = Off<br><input type="checkbox"/> The doors automatically lock. (Standard) = On                            |                                     |        |
| <b>3. Driver Door-Linked Unlock</b><br>When the vehicle is turned off and the driver door is opened within 10 seconds:<br><input type="checkbox"/> All of the remaining doors will remain locked. (Standard) = Off<br><input type="checkbox"/> All of the remaining doors will automatically unlock. = On |                                     |        |
| <b>4. Lock Feedback Volume</b><br>When the lock button is pressed on the electronic key, the system volume can be programmed as follows:<br>  |                                     |        |
| <b>5. Lock/Unlock Answer Back</b><br>Using the electronic key, the following functions can be programmed:<br><input type="checkbox"/> Press the lock/unlock button and the system will not beep. = Off<br><input type="checkbox"/> Press the lock/unlock button and the system will beep. (Standard) = On |                                     |        |

LPS options were correct at time of development. All options are subject to change without prior notice.















Settings that can be customized by:

|  | Using the multi-info switches   | Dealer  |
|--|---|---|
| <p><b>6. Auto Relock Time Adjustment</b><br/>When the unlock button on the electronic key is pressed and the doors are not opened:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> The doors will automatically re-lock in 30 seconds.</li> <li><input type="checkbox"/> The doors will automatically re-lock in 60 seconds. (Standard)</li> <li><input type="checkbox"/> The doors will automatically re-lock in 120 seconds.</li> <li><input type="checkbox"/> 0 seconds.</li> </ul>   |    |    |
| <p><b>7. Select Doors to Unlock</b><br/>When pressing the unlock button one time on the electronic key:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> All doors will unlock (Option # 8 Remote 2-Press Unlock must be Off). = All</li> <li><input type="checkbox"/> Only driver door unlocks (Option # 8 Remote 2-Press Unlock must be On). (Standard) = Driver</li> </ul>   |    |    |
| <p><b>8. Remote 2-Press Unlock</b><br/>When using the electronic key to unlock the doors:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> Pressing the unlock button one time will unlock all doors. = Off</li> <li><input type="checkbox"/> Pressing the unlock button one time unlocks the driver door, and two times unlocks all doors. (Standard) = On</li> </ul>  |    |    |
| <p><b>9. Headlight Off Time Adjustment</b><br/>After turning off the ignition and all the doors are closed, if the headlights are ON or in the AUTO position:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> The headlights will turn off immediately, when the vehicle is turned off and the driver door is opened.</li> <li><input type="checkbox"/> The headlights will turn off in 30 seconds.</li> <li><input type="checkbox"/> The headlights will turn off in 60 seconds. (Standard)</li> <li><input type="checkbox"/> The headlights will turn off in 90 seconds.</li> </ul>  |    |    |
| <p><b>10. Light Sensor Sensitivity</b><br/>When driving the vehicle, the front headlights can be programmed to turn ON under darker or lighter ambient light conditions. (Headlight switch must be in "AUTO" mode):</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"><br/>very dark</div> <div style="text-align: center;"><br/>dark</div> <div style="text-align: center;"><br/>normal<br/>(standard)</div> <div style="text-align: center;"><br/>light</div> <div style="text-align: center;"><br/>very light</div> </div> |  |  |
| <p><b>11. Daytime Running Lights</b><br/>Illumination of daytime running lights:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> OFF.</li> <li><input type="checkbox"/> ON. (Standard)</li> </ul>  |  |  |
| <p><b>12. Interior Lights Off Time Adjustment</b><br/>After closing the door, the interior lights can be adjusted to stay on for the following:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> 15 seconds. (Standard)</li> <li><input type="checkbox"/> 7.5 seconds.</li> <li><input type="checkbox"/> 30 seconds.</li> <li><input type="checkbox"/> 0 seconds.</li> </ul>  |  |  |
| <p><b>13. Exterior Lights Off Time Adjustment</b><br/>After closing the door, the exterior lights can be adjusted to stay on for the following:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> 15 seconds. (Standard)</li> <li><input type="checkbox"/> 7.5 seconds.</li> <li><input type="checkbox"/> 30 seconds.</li> <li><input type="checkbox"/> 0 seconds</li> </ul>   |  |  |

Settings that can be customized by:

|   | Using the multi-info switches | Dealer          |
|---|-------------------------------|-----------------|
| <p><b>14. Access System with Elec. Key</b><br/>                     When unlocking the doors:<br/> <input type="checkbox"/> Deactivates SmartAccess, only accessible using elec. key unlock button. = Off<br/> <input type="checkbox"/> Use SmartAccess (touch door handle) or remote buttons. (Standard) = On</p>  |                               |                 |
| <p><b>15. Driver's Seat Easy Exit</b><br/>                     When the vehicle is placed in park, the ignition turned off, the driver seat can be set to the following:<br/> <input type="checkbox"/> Remain in the current position, as set by the driver. = Off<br/> <input type="checkbox"/> Automatically move away from the steering wheel partially. (Standard) = Partial<br/> <input type="checkbox"/> Automatically move away from the steering wheel fully. = Full</p>                      |                               |                 |
| <p><b><u>Programmable by Dealer Only</u></b></p>  |                               |                 |
| <p><b>16. Shift-Linked Auto Unlock</b><br/>                     When the engine is running and the vehicle is placed into park:<br/> <input type="checkbox"/> All the doors will remain locked. = Off<br/> <input type="checkbox"/> All the doors will automatically unlock. (Standard) = On</p>  | —                             | <br>Dealer only |
| <p><b>17. Unlock on Second Key Turn</b><br/>                     When using the mechanical key to unlock the doors:<br/> <input type="checkbox"/> Turning the key one time will unlock all doors. = Off<br/> <input type="checkbox"/> Turning the key one time unlocks the driver door, and two times unlocks all doors. (Standard) = On</p>  | —                             | <br>Dealer only |
| <p><b>18. Auto A/C Mode</b><br/>                     When Auto A/C is selected:<br/> <input type="checkbox"/> It will automatically engage the air conditioner compressor to reach the set temperature. (Standard) = On<br/> <input type="checkbox"/> It will automatically achieve a set temperature, warm or cool, without engaging the air conditioner compressor.* = Off<br/>                     * Note: The AC compressor will be engaged when the auto AC button is pressed a second time.</p> | —                             | <br>Dealer only |
| <p><b>19. Efficient Ventilation Mode</b><br/>                     When the front defogger is activated:<br/> <input type="checkbox"/> It will automatically blow air onto the windshield without engaging the air conditioner compressor. = Off<br/> <input type="checkbox"/> It will automatically engage the air conditioner compressor to blow air onto the windshield. (Standard) = On</p>  | —                             | <br>Dealer only |
| <p><b>20. Instrument Dim. Sensitivity</b><br/>                     Level of light required to dim the instrument panel lights:</p> <p> </p> <p>very dark    dark    normal (standard)    light    very light</p>  | —                             | <br>Dealer only |
| <p><b>21. Instrument Rest. Sensitivity</b><br/>                     Level of light required to brighten the instrument panel lights:</p> <p> </p> <p>very light    light    normal (standard)    dark    very dark</p>  | —                             | <br>Dealer only |

Settings that can be customized by:

|   | Using the multi-info switches | Dealer   |
|---|-------------------------------|--|
| <p><b>22. Flashing of Signal Lights</b><br/>                     Using the electronic key, the following functions can be programmed:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> Press the lock or unlock button and the lights will not flash. = Off</li> <li><input type="checkbox"/> Press the lock button and the lights will flash once. Press the unlock button and the lights will flash twice. (Standard) = On</li> </ul>  | —                             | <br>Dealer only   |
| <p><b>23. Open Windows with Elec. Key</b><br/>                     When pressing the unlock button on the electronic key for 3 seconds:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> The windows will not roll down. (Standard) = Off</li> <li><input type="checkbox"/> All the windows will roll down. = On</li> </ul>  | —                             | <br>Dealer only   |
| <p><b>24. Open Windows and Moonroof with Elec. Key</b><br/>                     When pressing the unlock button on the electronic key for 3 seconds:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> The windows will roll down and the moonroof will not open. = Off</li> <li><input type="checkbox"/> All the windows will roll down and the moonroof will open. (Standard) = On</li> </ul> <p>Note: Option # 23 must be on.</p>  | —                             | <br>Dealer only   |
| <p><b>25. Slide/Tilt Moonroof with Elec. Key</b><br/>                     When option # 23 and # 24 are on, the moonroof can be programmed for the following:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> Slide. (Standard)</li> <li><input type="checkbox"/> Tilt.</li> </ul>  | —                             | <br>Dealer only   |
| <p><b>26. Tilt Away of Steering Wheel*</b><br/>                     When the vehicle is placed in park, the ignition turned off, the steering wheel can be set to the following:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> Automatically move up and away from the driver position setting. (Standard) = On</li> <li><input type="checkbox"/> Remain in the current position, as set by the driver. = Off</li> </ul> <p>* If equipped</p>   | —                             | <br>Dealer only  |
| <p><b>27. Automatic Recirculation of air when using A/C</b><br/>                     When the air conditioner is ON or in AUTO, the vehicle can be programmed for the following:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> To automatically switch between the recirculation mode and fresh air mode as necessary to meet the temperature requirement set. (Standard)</li> <li><input type="checkbox"/> When the climate control is turned on, the user must manually select the desired mode, recirculation or fresh air mode.</li> </ul>  | —                             | <br>Dealer only |
| <p><b>28. Smog Sensor Sensitivity</b><br/>                     When in AUTO recirculation mode, the sensor will determine when to switch from outside air to recirculated air based on outside air quality:</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"><br/>lowest sensitivity</div> <div style="text-align: center;"><br/>sensitivity 2</div> <div style="text-align: center;"><br/>sensitivity 3</div> <div style="text-align: center;"><br/>normal (standard)</div> <div style="text-align: center;"><br/>sensitivity 5</div> <div style="text-align: center;"><br/>sensitivity 6</div> <div style="text-align: center;"><br/>highest sensitivity</div> </div> | —                             | <br>Dealer only |

Date \_\_\_\_\_ Customer Signature \_\_\_\_\_

Repair Order Number (Dealer only) \_\_\_\_\_

Vehicle Identification Number (Dealer only) \_\_\_\_\_