

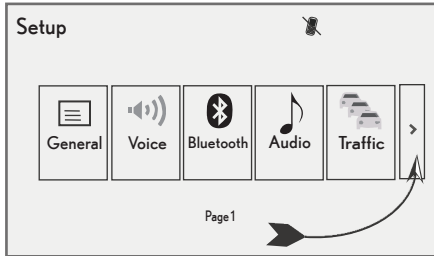 
# Lexus Personalized Settings

Your vehicle includes a variety of electronic features that can be programmed to your preferences. Programming of these features is performed once at no charge by your Lexus Dealer provided you obtain the service at the 6 month/5,000-mile scheduled maintenance service.

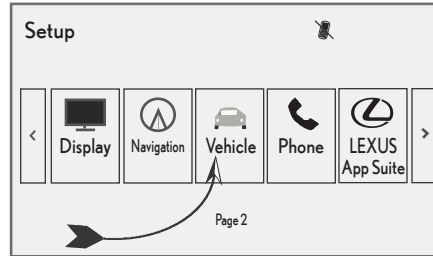


It is also possible to customize certain vehicle features yourself using the navigation system.

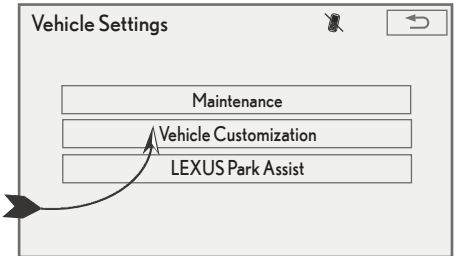
## Vehicles with Navigation system:




**STEP 1** Press the **SETUP** panel button followed by the arrow (>).

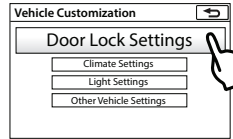

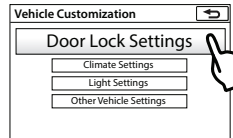

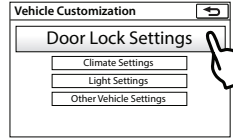

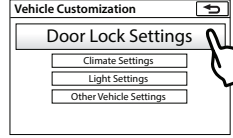

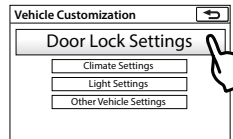



**STEP 2** Touch .

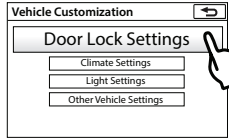

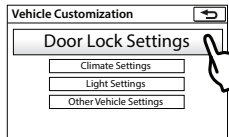

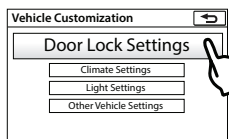

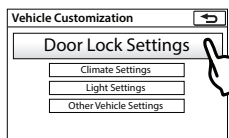

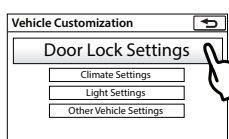

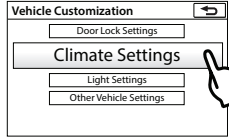

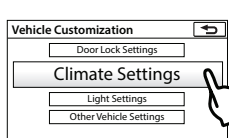

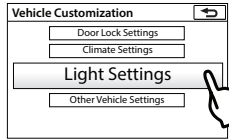



**STEP 3** Touch  then the desired category. Scroll to specific customization setting.

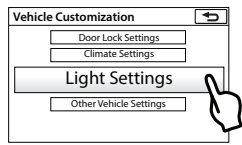

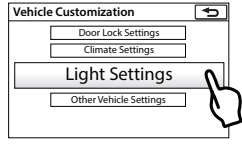

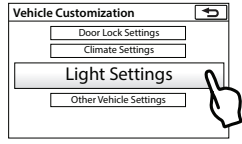

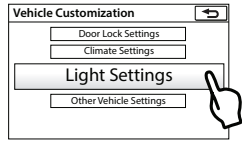

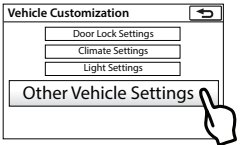



Vehicle must be in "ON" mode to program personalized settings.




















	Settings that can be customized by:	
	Using the navigation system	Dealer
<p><b>Door Lock Settings</b></p> <p><b>1. Auto Lock by Speed</b> When the vehicle reaches 13 mph:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> The doors will not lock (Standard) = Off</li> <li><input type="checkbox"/> All the doors will automatically lock = On</li> </ul>		
<p><b>2. Auto Lock by Shift from P</b> When the vehicle is taken out of park and placed into another range:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> The doors, if unlocked, will not automatically lock = Off</li> <li><input type="checkbox"/> The doors automatically lock (Standard) = On</li> </ul>		
<p><b>3. Auto Unlock by Shift to P</b> When the engine is running and the vehicle is placed into park:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> All the doors will remain locked = Off</li> <li><input type="checkbox"/> All the doors will automatically unlock (Standard) = On</li> </ul>		
<p><b>4. Auto Unlock by Driver Door</b> When the vehicle is turned off and the driver door is opened within 10 seconds:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> All of the remaining doors will remain locked (Standard) = Off</li> <li><input type="checkbox"/> All of the remaining doors will automatically unlock = On</li> </ul>		
<p><b>5. Remote 2-Press Unlock</b> When using the electronic key to unlock the doors:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> Pressing the unlock button one time will unlock all doors = Off</li> <li><input type="checkbox"/> Pressing the unlock button one time unlocks the driver door, and two times unlocks all doors (Standard) = On</li> </ul>		

LPS options were correct at time of development. All options are subject to change without prior notice.

<u>Door Lock Settings (cont'd)</u>	Using the navigation system	Dealer
<p><b>6. Select Doors to Unlock</b>                      When pressing the unlock button one time on the electronic key:  <input type="checkbox"/> All doors will unlock (Option #5 Remote 2-Press Unlock must be Off) = All  <input type="checkbox"/> Only driver door unlocks (Option #5 Remote 2-Press Unlock must be On) (Standard) = Driver</p>		
<p><b>7. Access System with Electronic Key</b>                      When unlocking the doors:  <input type="checkbox"/> Deactivates SmartAccess. Access using electronic key unlock button = Off  <input type="checkbox"/> Use SmartAccess (touch door handle) or remote buttons (Standard) = On</p>		
<p><b>8. Auto Relock Timer</b>                      When the unlock button on the electronic key is pressed and the doors are not opened:  <input type="checkbox"/> The doors will automatically re-lock in 120 seconds  <input type="checkbox"/> The doors will automatically re-lock in 60 seconds. (Standard)  <input type="checkbox"/> The doors will automatically re-lock in 30 seconds.  <input type="checkbox"/> OFF. The doors will NOT automatically re-lock.</p>		
<p><b>9. Lock/Unlock Feedback - Lights</b>                      Using the electronic key, the following functions can be programmed:  <input type="checkbox"/> Press the lock/unlock button and emergency flashers will not flash = Off  <input type="checkbox"/> Press the lock/unlock button and the emergency flashers will flash (Standard) = On</p>		
<p><b>10. Lock/Unlock Feedback-Tone</b>                      When the lock button is pressed on the electronic key, the system volume can be programmed as follows:</p> <p> <input type="checkbox"/> off                        <input type="checkbox"/> volume 1                        <input type="checkbox"/> volume 2                        <input type="checkbox"/> volume 3                        <input type="checkbox"/> volume 4                        <input type="checkbox"/> volume 5                        <input type="checkbox"/> loudest (standard)                 </p>		
<p><b>Climate Settings</b></p>		
<p><b>11. Smog Sensor Sensitivity</b>                      When in AUTO recirculation mode, the sensor will determine when to switch from outside air to recirculated air based on outside air quality:</p> <p> <input type="checkbox"/> lowest sensitivity                        <input type="checkbox"/> sensitivity 2                        <input type="checkbox"/> sensitivity 3                        <input type="checkbox"/> normal (standard)                        <input type="checkbox"/> sensitivity 5                        <input type="checkbox"/> sensitivity 6                        <input type="checkbox"/> highest sensitivity                 </p>		
<p><b>12. Auto A/C Mode</b>                      When Auto A/C is selected:  <input type="checkbox"/> It will automatically engage the air conditioner compressor to reach the set temperature (Standard) = On  <input type="checkbox"/> It will automatically achieve a set temperature, warm or cool, without engaging the air conditioner compressor = Off                      Note: The AC compressor will be engaged when the auto AC button is pressed a second time.</p>		
<p><b>Light Settings</b></p>		
<p><b>13. Headlamps ON - Sensitivity</b>                      When driving the vehicle, the front headlights can be programmed to turn ON under darker or lighter ambient light conditions. (Headlight switch must be in "AUTO" mode):</p> <p> <input type="checkbox"/> very dark                        <input type="checkbox"/> dark                        <input type="checkbox"/> normal (standard)                        <input type="checkbox"/> light                        <input type="checkbox"/> very light                 </p>		

Settings that can be customized by:

Light Settings (cont'd)	Using the navigation system	Dealer
<p><b>14. Headlamps Auto-OFF Timer</b>            When headlights are in the AUTO position with the ignition off and all doors closed:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> The headlights will turn off in 90 seconds.</li> <li><input type="checkbox"/> The headlights will turn off in 60 seconds.</li> <li><input type="checkbox"/> The headlights will turn off in 30 seconds. (Standard)</li> <li><input type="checkbox"/> The headlights will turn off immediately, when the vehicle is turned off and the driver door is opened.</li> </ul>		
<p><b>15. Daytime Running Lights</b>            Illumination of daytime running lights:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> OFF</li> <li><input type="checkbox"/> ON (Standard)</li> </ul>		
<p><b>16. Interior Lights Off Timer</b>            After closing the door, the interior lights can be adjusted to stay on for the following:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> 15 seconds (Standard)</li> <li><input type="checkbox"/> 7.5 seconds</li> <li><input type="checkbox"/> 30 seconds</li> </ul>		
<p><b>17. Exterior Lights Off Timer</b>            After closing the door, the exterior lights can be adjusted to stay on for the following:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> 30 second</li> <li><input type="checkbox"/> 15 seconds (Standard)</li> <li><input type="checkbox"/> 7.5 seconds</li> <li><input type="checkbox"/> 0 seconds</li> </ul>		
<p><b>Other Vehicle Settings</b></p> <p><b>18. Driver's Seat Easy Exit</b>            When the vehicle is placed in park and the ignition turned off, the driver seat can be set to the following:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> Remain in the current position, as set by the driver = Off</li> <li><input type="checkbox"/> Automatically move away from the steering wheel partially = Partial</li> <li><input type="checkbox"/> Automatically move away from the steering wheel fully = Full (Standard)</li> </ul>		
<p><b>Programmable by Dealer Only</b></p> <p><b>19. Open Windows with Electronic Key</b>            When pressing the unlock button on the electronic key for 3 seconds:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> The windows will not roll down (Standard) = Off</li> <li><input type="checkbox"/> All the windows will roll down = On</li> </ul>	<p>_____</p>	 Dealer only
<p><b>20. Open Windows Warning</b>            When pressing the unlock button on the electronic key for 3 seconds to roll down the windows:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> The buzzer will not sound = Off</li> <li><input type="checkbox"/> The buzzer will sound (Standard) = On</li> </ul> <p>Note: Option #19 must be on</p>	<p>_____</p>	 Dealer only

Programmable by Dealer Only (cont'd)	Using the navigation system	Dealer
<p><b>21. Slide/Tilt Moonroof with Electronic Key</b> When option #19 is on, the moonroof can be programmed for the following:</p> <p><input type="checkbox"/> Slide (Standard) <input type="checkbox"/> Tilt</p>	_____	 Dealer only
<p><b>22. Opening Windows Using Key</b> When using the mechanical key to operate the windows:</p> <p><input type="checkbox"/> Turning the key right and holding the position for 2 seconds will not open the windows (Standard) = Off <input type="checkbox"/> Turning the key right and holding the position for 2 seconds will open the windows = On</p>	_____	 Dealer only
<p><b>23. Slide/Tilt Moonroof Using Key</b> When option #22 is on, the moonroof can be programmed for the following:</p> <p><input type="checkbox"/> Slide (Standard) <input type="checkbox"/> Tilt</p>	_____	 Dealer only
<p><b>24. Efficient Ventilation Mode</b> When the front defogger is activated:</p> <p><input type="checkbox"/> It will automatically blow air onto the windshield without engaging the air conditioner compressor = Off <input type="checkbox"/> It will automatically engage the air conditioner compressor to blow air onto the windshield (Standard)= On</p>	_____	 Dealer only
<p><b>25. Instrument Dimming Sensitivity</b> Level of light required to dim the instrument panel lights:</p> <p>    </p> <p>very dark      dark      normal (standard)      light      very light</p>	_____	 Dealer only
<p><b>26. Instrument Restore Sensitivity</b> Level of light required to brighten the instrument panel lights:</p> <p>    </p> <p>very dark      dark      normal (standard)      light      very light</p>	_____	 Dealer only
<p><b>27. Tilt Away of Steering Wheel</b> When the vehicle is in park and the ignition turned off, the steering wheel can be set to:</p> <p><input type="checkbox"/> Automatically move up and away from the driver position setting (Standard) = On <input type="checkbox"/> Remain in the current position, as set by the driver = Off</p>	_____	 Dealer only
<p><b>28. Lock/Unlock Answer Back</b> Using the electronic key, the following functions can be programmed:</p> <p><input type="checkbox"/> Press the lock/unlock button and the system will not beep = Off <input type="checkbox"/> Press the lock/unlock button and the system will beep (Standard) = On</p>	_____	 Dealer only
<p><b>29. Automatic High Beam*</b> Illumination of automatic high beam:</p> <p><input type="checkbox"/> OFF <input type="checkbox"/> ON (Standard) * If equipped.</p>	_____	 Dealer only

Settings that can be customized by:

<b>Programmable by dealer (cont'd)</b> <b>30. Opening the Hatch</b> Pressing the trunk release button on the electronic key will open the hatch. The release button can be programmed as follows:	Using the navigation system	Dealer
	<input type="checkbox"/> Press button one time to release the hatch. (No delay) <input type="checkbox"/> Press button two times to release the hatch. <input type="checkbox"/> Press and hold button for 0.8 seconds to release the hatch. (Standard) <input type="checkbox"/> Press and hold button for 3 seconds to release the hatch. <input type="checkbox"/> The button can be turned off so the hatch cannot be opened using the electronic key.	_____

Date \_\_\_\_\_ Customer Signature \_\_\_\_\_

Repair Order Number (Dealer only) \_\_\_\_\_

Vehicle Identification Number (Dealer only) \_\_\_\_\_