


Lexus Personalized Settings

Your vehicle includes a variety of electronic features that can be programmed to your preferences. Programming of these features is performed once at no charge by your Lexus Dealer provided you obtain the service at the 6-month/5,000-mile scheduled maintenance service.



It is also possible to customize certain vehicle features yourself using the **DISP** switch.

Vehicles without Navigation system:

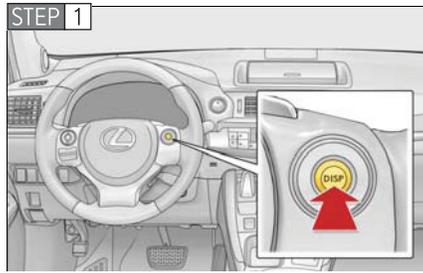

STEP 1
Press the **DISP** switch several times until the "SETTINGS" screen appears. Press and hold the **DISP** switch to display the Customize Mode screen.



STEP 2
Press the **DISP** switch again to highlight "VEHICLE" from the list. Press and hold the **DISP** switch to view the customization options. Press to scroll, or press and hold to select highlighted option.

Please refer to the 2017 CT 200h Quick Guide or Owner's Manual for more information on how to operate the "DISP" switch.

Vehicle must be in "ON" mode to program personalized settings.

	Settings that can be customized by:	
	Using the "DISP" switch	Dealer
1. Speed Sensitive Auto Lock When the vehicle reaches 12 mph: <input type="checkbox"/> The doors will not lock (Standard) = Off <input type="checkbox"/> All the doors will automatically lock = On	DISP	
2. Shift-Linked Automatic Lock When the vehicle is shifted out of Park into another position: <input type="checkbox"/> The doors will not automatically lock = Off <input type="checkbox"/> The doors automatically lock (Standard) = On	DISP	
3. Shift-Linked Auto Unlock When the engine is running and the vehicle is placed into Park: <input type="checkbox"/> All the doors will remain locked = Off <input type="checkbox"/> All the doors will automatically unlock (Standard) = On	DISP	
4. Driver Door-Linked Unlock When the vehicle is turned off and the driver door is opened within 10 seconds: <input type="checkbox"/> All of the remaining doors will remain locked (Standard) = Off <input type="checkbox"/> All of the remaining doors will automatically unlock = On	DISP	
5. Lock Feedback Volume When the lock button is pressed on the electronic key, the system volume can be programmed as follows: 	DISP	

LPS options were correct at time of development of this form. All options are subject to change without prior notice.

Settings that can be customized by:

	Using the "DISP" switch	Dealer
<p>6. Lock/Unlock Answer Back When pressing the lock/unlock button on the electronic key:</p> <ul style="list-style-type: none"> <input type="checkbox"/> The system will not beep = Off <input type="checkbox"/> The system will beep (Standard) = On 		
<p>7. Auto Relock Time Adjustment When the unlock button on the electronic key is pressed and the doors are not opened:</p> <ul style="list-style-type: none"> <input type="checkbox"/> The doors will automatically relock in 120 seconds <input type="checkbox"/> The doors will automatically relock in 60 seconds (Standard) <input type="checkbox"/> The doors will automatically relock in 30 seconds <input type="checkbox"/> The doors will not automatically relock (0 seconds) = Off 		
<p>8. Select Doors to Unlock When using Smart Access to unlock the doors:</p> <ul style="list-style-type: none"> <input type="checkbox"/> Gripping outside driver door handle will unlock driver's door (Standard) = Driver's door <input type="checkbox"/> Gripping outside driver door handle will unlock all doors = All doors 		
<p>9. Remote 2-Press Unlock When using the electronic key to unlock the doors:</p> <ul style="list-style-type: none"> <input type="checkbox"/> Pressing the unlock button one time will unlock all doors = Off <input type="checkbox"/> Pressing the unlock button one time unlocks the driver door, and two times unlocks all doors (Standard) = On 		
<p>10. Headlight Off Time Adjustment After turning off the ignition and all the doors are closed, if the headlights are On or in the Auto position:</p> <ul style="list-style-type: none"> <input type="checkbox"/> The headlights will turn off immediately when the vehicle is turned off and the driver door is opened = Off <input type="checkbox"/> The headlights will turn off in 90 seconds <input type="checkbox"/> The headlights will turn off in 60 seconds <input type="checkbox"/> The headlights will turn off in 30 seconds (Standard) 		
<p>11. Light Sensor Sensitivity The front headlights can be programmed to turn On under varying degrees of ambient light conditions (headlight switch must be in the Auto mode):</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;">  very dark </div> <div style="text-align: center;">  dark </div> <div style="text-align: center;">  normal (standard) </div> <div style="text-align: center;">  light </div> <div style="text-align: center;">  very light </div> </div>		
<p>12. Daytime Running Lights Illumination of daytime running lights:</p> <ul style="list-style-type: none"> <input type="checkbox"/> Off <input type="checkbox"/> On (Standard) 		
<p>13. Interior Lights-Off Time Adjustment After closing the door, the interior lights can be adjusted to stay on for the following:</p> <ul style="list-style-type: none"> <input type="checkbox"/> 30 seconds <input type="checkbox"/> 15 seconds (Standard) <input type="checkbox"/> 7.5 seconds <input type="checkbox"/> 0 seconds = Off 		

	Settings that can be customized by:	
	Using the "DISP" switch	Dealer
<p>14. Exterior Lights-Off Time Adjustment After closing the door, the exterior lights can be adjusted to stay on for the following:</p> <ul style="list-style-type: none"> <input type="checkbox"/> 30 seconds <input type="checkbox"/> 15 seconds (Standard) <input type="checkbox"/> 7.5 seconds <input type="checkbox"/> 0 seconds 		
<p>15. Access System with Electronic Key Unlock the doors with:</p> <ul style="list-style-type: none"> <input type="checkbox"/> Electronic key unlock button. This deactivates Smart Access = Off <input type="checkbox"/> SmartAccess (touch door handle) or remote buttons (Standard) = On 		
<p>16. Auto A/C Mode When Auto A/C is selected:</p> <ul style="list-style-type: none"> <input type="checkbox"/> It will automatically engage the air conditioner compressor to reach the set temperature (Standard) = On <input type="checkbox"/> It will automatically achieve a set temperature, warm or cool, without engaging the air conditioner compressor* = Off <p>* Note: The A/C compressor will be engaged when the Auto A/C button is pressed a second time.</p>		
<p><u>Programmable by Dealer Only</u></p>		
<p>17. Lock/Unlock Feedback - Lights When the lock or unlock button on the electronic key is pressed:</p> <ul style="list-style-type: none"> <input type="checkbox"/> Lock button makes lights flash once/Unlock button makes lights flash twice (Standard) = On <input type="checkbox"/> Lights will not flash = Off 	<hr style="width: 50px; margin: auto;"/>	 Dealer only
<p>18. Door Lock Buzzer When the lock button on the electronic key is pressed and a door is not fully closed:</p> <ul style="list-style-type: none"> <input type="checkbox"/> The buzzer will not sound = Off <input type="checkbox"/> The buzzer will sound (Standard) = On 	<hr style="width: 50px; margin: auto;"/>	 Dealer only
<p>19. Panic Mode When pressing the panic button on the electronic key:</p> <ul style="list-style-type: none"> <input type="checkbox"/> The alarm will not sound and the vehicle lights will not flash = Off <input type="checkbox"/> The alarm will sound intermittently and the vehicle lights will flash (Standard) = On 	<hr style="width: 50px; margin: auto;"/>	 Dealer only
<p>20. Open Windows Warning* When unlock button on the electronic key is pressed for 3 seconds to roll down the windows:</p> <ul style="list-style-type: none"> <input type="checkbox"/> Buzzer will not sound = Off <input type="checkbox"/> Buzzer will sound (Standard) = On <p>* Option #24 must be on</p>	<hr style="width: 50px; margin: auto;"/>	 Dealer only
<p>21. Unlock on Second Key Turn When using the mechanical key to unlock the doors:</p> <ul style="list-style-type: none"> <input type="checkbox"/> Turning the key one time will unlock all doors = Off <input type="checkbox"/> Turning the key one time unlocks the driver door, and two times unlocks all doors (Standard) = On 	<hr style="width: 50px; margin: auto;"/>	 Dealer only
<p>22. Close Windows with Mechanical Key When using the mechanical key to operate windows:</p> <ul style="list-style-type: none"> <input type="checkbox"/> Turning the key right and holding the position for 1.5 seconds will not close the windows (Standard) = Off <input type="checkbox"/> Turning the key right and holding the position for 1.5 seconds will close the windows = On 	<hr style="width: 50px; margin: auto;"/>	 Dealer only

Programmable by Dealer Only (cont'd)	Using the "DISP" switch	Dealer
23. Open Windows with Mechanical Key When using the mechanical key to operate windows: <input type="checkbox"/> Turning the key left and holding the position for 1.5 seconds will not open the windows (Standard) = Off <input type="checkbox"/> Turning the key left and holding the position for 1.5 seconds will open the windows = On	_____	 Dealer only
24. Open Windows with Electronic Key When pressing the unlock button on the electronic key for 3 seconds: <input type="checkbox"/> The windows will not open (Standard) = Off <input type="checkbox"/> All the windows will open = On	_____	 Dealer only
25. Illumination of the Interior Cabin Lights when Unlocking Door When using the electronic or mechanical key to unlock the door: <input type="checkbox"/> The cabin lights will not illuminate = Off <input type="checkbox"/> The cabin lights will illuminate (Standard) = On	_____	 Dealer only
26. Illumination of the Interior Cabin Lights when Approaching the Vehicle When approaching the vehicle with the electronic key: <input type="checkbox"/> The cabin lights will not illuminate = Off <input type="checkbox"/> The cabin lights will illuminate (Standard) = On	_____	 Dealer only
27. Center Console Spot Light The center console spot light will illuminate when Power is in Accessory mode: <input type="checkbox"/> Off <input type="checkbox"/> On (Standard)	_____	 Dealer only
28. Illumination of the Outer Foot Lights when Approaching the Vehicle When approaching the vehicle with the electronic key: <input type="checkbox"/> The outer foot lights will not illuminate = Off <input type="checkbox"/> The outer foot lights will illuminate (Standard) = On	_____	 Dealer only
29. Illumination of the Outer Foot Lights when Unlocking the Door When using the electronic key to unlock the door: <input type="checkbox"/> The foot lights will not illuminate = Off <input type="checkbox"/> The foot lights will illuminate (Standard) = On	_____	 Dealer only
30. Interior Light The interior light will illuminate when Power is switched to off: <input type="checkbox"/> Off <input type="checkbox"/> On (Standard)	_____	 Dealer only
31. Instrument Restore Sensitivity Level of light at which the instrument panel lights will brighten: <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> very light</div> <div style="text-align: center;"> light</div> <div style="text-align: center;"> normal (standard)</div> <div style="text-align: center;"> dark</div> <div style="text-align: center;"> very dark</div> </div>	_____	 Dealer only
32. Instrument Dimming Sensitivity Level of light at which the instrument panel lights will dim: <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> very dark</div> <div style="text-align: center;"> dark</div> <div style="text-align: center;"> normal (standard)</div> <div style="text-align: center;"> light</div> <div style="text-align: center;"> very light</div> </div>	_____	 Dealer only

Settings that can be customized by:

	Using the "DISP" switch	Dealer
Programmable by Dealer Only (cont'd)		
33. Efficient Ventilation Mode When the front defogger is activated: <input type="checkbox"/> It will automatically blow air onto the windshield without engaging the air conditioner compressor = Off <input type="checkbox"/> It will automatically engage the air conditioner compressor to blow air onto the windshield (Standard) = On	_____	 Dealer only
34. Driver Seat Belt Reminder When the vehicle reaches 12 mph: <input type="checkbox"/> The driver seat belt buzzer will not sound = Off <input type="checkbox"/> The driver seat belt buzzer will sound (Standard) = On	_____	 Dealer only
35. Passenger Seat Belt Reminder When the vehicle reaches 12 mph: <input type="checkbox"/> The passenger seat belt buzzer will not sound = Off <input type="checkbox"/> The passenger seat belt buzzer will sound (Standard) = On	_____	 Dealer only
36. Reverse Beep Alert When the vehicle is put into reverse: <input type="checkbox"/> The alert will beep continuously (Standard) = On <input type="checkbox"/> The alert will beep once = Off	_____	 Dealer only

Date _____ Customer Signature _____

Repair Order Number (Dealer only) _____

Vehicle Identification Number (Dealer only) _____