

 
# Lexus Personalized Settings

Your vehicle includes a variety of electronic features that can be programmed to your preferences. Programming of these features is performed once at no charge by your Lexus Dealer provided you obtain the service at the 6-month/5,000-mile scheduled maintenance service.




It is also possible to customize certain vehicle features yourself using the navigation system screen.


## Vehicles with Navigation System:

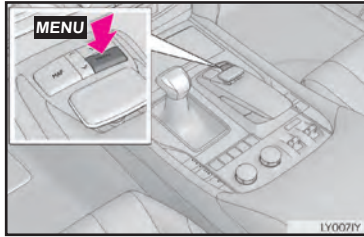


**STEP 1** Press the **MENU** button.

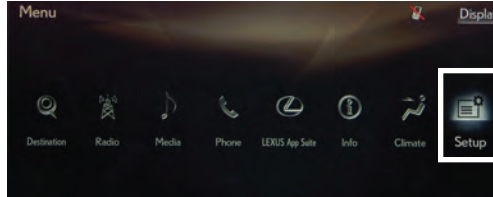 

 
**STEP 2** Highlight **Setup** using the Remote Touch, then push knob to select.

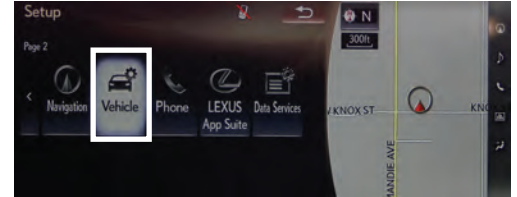

 **STEP 3** Scroll to Page 2. Highlight **Vehicle** then push knob to select.

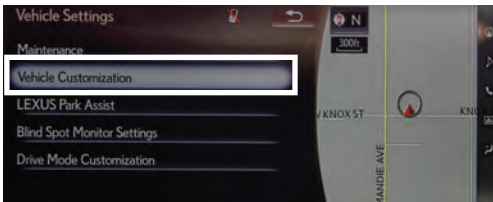

 **STEP 4** Highlight **Vehicle Customization** then push knob to select.

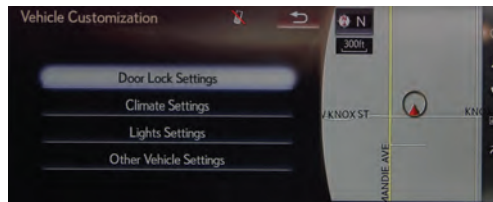

 

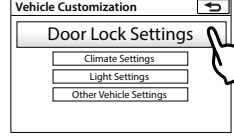 

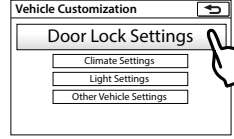 

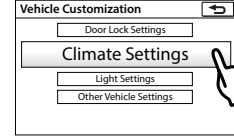 

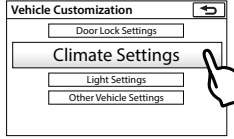 

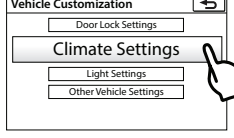 

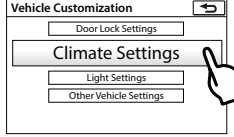 

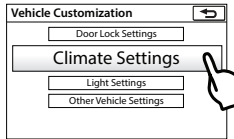 

**STEP 5** Select category and scroll to specific customization setting.

 

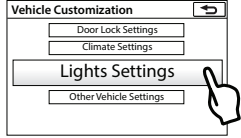 

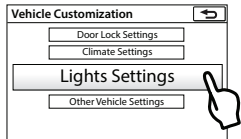 

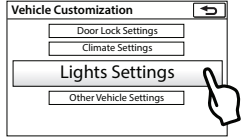 

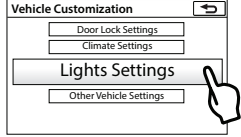 

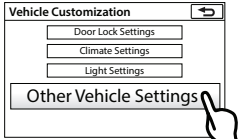 


Vehicle must be in "ON" mode to program personalized settings.





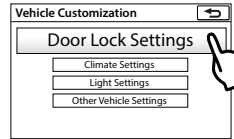

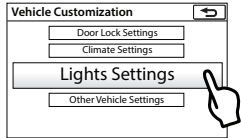



Please refer to the 2017 LX 570 Quick Guide or Navigation Owner's Manual for more information on Remote Touch operations.
















	Settings that can be customized by:	
	Using the Navigation System	Dealer
<h3>Door Lock Settings</h3> <p><b>1. Automatic Door Lock</b> The automatic door locks can be programmed as follows:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> The doors automatically lock when the vehicle speed is 12 mph or higher = By speed</li> <li><input type="checkbox"/> The doors automatically lock when the vehicle is taken out of Park and shifted into another range (Standard) = By shift from P</li> <li><input type="checkbox"/> The doors will not automatically lock = Off</li> </ul>		
<p><b>2. Automatic Door Unlock</b> The automatic door locks can be programmed as follows:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> The doors automatically unlock when the vehicle is shifted into Park (Standard) = By shift to P</li> <li><input type="checkbox"/> All the doors automatically unlock when the driver door is opened = By driver door</li> <li><input type="checkbox"/> The doors will not automatically unlock = Off</li> </ul>		
<p><b>3. Remote 2-Press Unlock</b> When using the electronic key to unlock the doors:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> Pressing the unlock button one time unlocks the driver's door and two times unlocks all doors (Standard) = On</li> <li><input type="checkbox"/> Pressing the unlock button one time unlocks all doors = Off</li> </ul>		
<p><b>4. Select Doors to Unlock</b> When using Smart Access to unlock the doors:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> Gripping the driver door handle will unlock all doors = All doors</li> <li><input type="checkbox"/> Gripping the driver door handle will unlock the driver's door (Standard) = Driver's door</li> </ul>		

 









LPS options were correct at time of development. All options are subject to change without prior notice.

Door Lock Settings (cont'd)	Using the Navigation System	Dealer
<p><b>5. Auto Relock Timer</b>                      When the doors are unlocked and not opened:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> They will automatically re-lock in 120 seconds</li> <li><input type="checkbox"/> They will automatically re-lock in 60 seconds (Standard)</li> <li><input type="checkbox"/> They will automatically re-lock in 30 seconds</li> <li><input type="checkbox"/> They will not re-lock = Off</li> </ul>		
<p><b>6. Lock/Unlock Feedback - Lights</b>                      When the lock or unlock button on the electronic key is pressed:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> Lock button makes lights flash once/Unlock button makes lights flash twice (Standard) = On</li> <li><input type="checkbox"/> Lights will not flash = Off</li> </ul>		
<p><b>7. Lock/Unlock Feedback - Tone</b>                      When the lock button is pressed on the electronic key, the system volume can be programmed as follows:</p> <p>off    volume 1    volume 2    volume 3    volume 4    volume 5 (standard)    volume 6    volume 7</p>		
<p><b>Climate Settings</b></p>		
<p><b>8. Auto Seat Temperature FR L (Front Left)</b>                      Sensitivity level for climate controlled (AC, heater) driver seat:</p> <p>Very High    High    Normal (Standard)    Low    Very Low</p>		
<p><b>9. Auto Seat Temp. FR R (Front Right)</b>                      Sensitivity level for climate controlled (AC, heater) front passenger seat:</p> <p>Very High    High    Normal (Standard)    Low    Very Low</p>		
<p><b>10. Auto Heated Steering Wheel*</b>                      Operates automatically according to the outside and cabin temperatures when the engine switch is turned to IG-ON:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> On (Standard)</li> <li><input type="checkbox"/> Off</li> </ul> <p>*If equipped</p>		
<p><b>11. Auto Heated Steering Wheel Time*</b>                      Adjust the time when the heated steering wheel automatically turns off:</p> <p>Very Short    Short    Normal (Standard)    Long    Very Long</p> <p>*If equipped</p>		
<p><b>12. Smog Sensor Sensitivity</b>                      When in AUTO recirculation mode, the sensor will determine when to switch from outside air to recirculated air based on outside air quality:</p> <p>lowest sensitivity    sensitivity 2    sensitivity 3    normal (Standard)    sensitivity 5    sensitivity 6    highest sensitivity</p>		

<h2>Lights Settings</h2>	Using the Navigation System	Dealer
<p><b>13. Headlamps-On Sensitivity</b> The front headlights can be programmed to turn On under varying degrees of ambient light conditions (headlight switch must be in AUTO mode):</p> <p> <input type="radio"/> very dark                        <input type="radio"/> dark                        <input type="radio"/> normal (Standard)                        <input type="radio"/> light                        <input type="radio"/> very light                 </p>		
<p><b>14. Headlights Auto-Off Timer</b> When the ignition is turned off and all the doors are closed (headlight switch must be in ON or AUTO mode):</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> The headlights will turn off in 90 seconds</li> <li><input type="checkbox"/> The headlights will turn off in 60 seconds</li> <li><input type="checkbox"/> The headlights will turn off in 30 seconds (Standard)</li> <li><input type="checkbox"/> The headlights will turn off immediately when the vehicle is turned off and the driver door is opened</li> </ul>		
<p><b>15. Daytime Running Lights</b> Illumination of daytime running lights:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> On (Standard)</li> <li><input type="checkbox"/> Off</li> </ul>		
<p><b>16. Interior Lights Off Timer</b> The interior lights can be adjusted to stay on after closing the door as follows:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> 30 seconds</li> <li><input type="checkbox"/> 15 seconds (Standard)</li> <li><input type="checkbox"/> 7.5 seconds</li> <li><input type="checkbox"/> Off</li> </ul>		
<p><b>17. Exterior Lights Off Timer</b> The exterior lights can be adjusted to stay on after closing the door as follows:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> 30 seconds</li> <li><input type="checkbox"/> 15 seconds (Standard)</li> <li><input type="checkbox"/> 7.5 seconds</li> <li><input type="checkbox"/> Off</li> </ul>		
<p><b>Other Vehicle Settings</b></p> <p><b>18. Driver's Seat Easy Exit*</b> When the vehicle is placed in park and the ignition turned off, the driver seat can be set as follows:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> Automatically move fully away from the steering wheel (Standard) = Full</li> <li><input type="checkbox"/> Automatically move partially away from the steering wheel = Partial</li> <li><input type="checkbox"/> Remain in the current position, as set by the driver = Off</li> </ul> <p>* If equipped</p>		
<p><b>Programmable by Dealer Only</b></p> <p><b>19. Unlock on Second Key Turn</b> When using the mechanical key to unlock the doors:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> Turning the key one time will unlock all doors = Off</li> <li><input type="checkbox"/> Turning the key one time unlocks the driver door, and two times unlocks all doors (Standard) = On</li> </ul>	<p>—</p>	 Dealer only

Programmable by Dealer Only (cont'd)	Using the Navigation System	Dealer
<b>20. Access System with Electronic Key</b> Unlock the doors with: <input type="checkbox"/> Electronic key unlock button (deactivates Smart Access) = Off <input type="checkbox"/> Smart Access (touch door handle) or electronic key (Standard) = On	_____	 Dealer only
<b>21. Panic Mode</b> When pressing the panic button on the electronic key: <input type="checkbox"/> The alarm will not sound and the vehicle lights will not flash = Off <input type="checkbox"/> The alarm will sound intermittently and the vehicle lights will flash (Standard) = On	_____	 Dealer only
<b>22. Door Lock Buzzer</b> When the lock button on the electronic key is pressed and a door is not fully closed: <input type="checkbox"/> The buzzer will not sound = Off <input type="checkbox"/> The buzzer will sound (Standard) = On	_____	 Dealer only
<b>23. Wireless Remote Window Operation Buzzer</b> When option #27 is on, and the wireless remote is used to open windows: <input type="checkbox"/> The buzzer will not sound = Off <input type="checkbox"/> The buzzer will sound (Standard) = On	_____	 Dealer only
<b>24. Open Moon Roof Buzzer</b> When the lock button on the electronic key is pressed and the moon roof is not fully closed: <input type="checkbox"/> The buzzer will not sound = Off <input type="checkbox"/> The buzzer will sound (Standard) = On	_____	 Dealer only
<b>25. Close Windows and Moon Roof with Mechanical Key</b> When using the mechanical key to operate windows and moon roof: <input type="checkbox"/> Turning the key right and holding the position for 2 seconds will not close the windows and moon roof (Standard) = Off <input type="checkbox"/> Turning the key right and holding the position for 2 seconds will close the windows and moon roof = On	_____	 Dealer only
<b>26. Open Windows and Moon Roof with Mechanical Key</b> When using the mechanical key to operate windows and moon roof: <input type="checkbox"/> Turning the key left and holding the position for 2 seconds will not open the windows and moon roof (Standard) = Off <input type="checkbox"/> Turning the key left and holding the position for 2 seconds will open the windows and moon roof = On	_____	 Dealer only
<b>27. Open Windows and Moon Roof with Electronic Key</b> When pressing the unlock button on the electronic key for 3 seconds: <input type="checkbox"/> The windows and moon roof will not open (Standard) = Off <input type="checkbox"/> All the windows and moon roof will open = On	_____	 Dealer only
<b>28. Slide/Tilt Moon Roof with Mechanical Key</b> When option #26 is on, the moon roof can be programmed to: <input type="checkbox"/> Slide (Standard) <input type="checkbox"/> Tilt	_____	 Dealer only
<b>29. Slide/Tilt Moon Roof with Electronic Key</b> When option #27 is on, the moon roof can be programmed to: <input type="checkbox"/> Slide (Standard) <input type="checkbox"/> Tilt	_____	 Dealer only

Programmable by Dealer Only (cont'd)	Using the Navigation System	Dealer
<b>30. Interior Light</b> The interior light will illuminate when POWER is switched to Off: <input type="checkbox"/> Off <input type="checkbox"/> On (Standard)	<hr/>	 Dealer only
<b>31. Illumination of the Interior Cabin Light when Unlocking Door</b> When using the electronic or mechanical key to unlock the door: <input type="checkbox"/> The cabin light will not illuminate = Off <input type="checkbox"/> The cabin light will illuminate (Standard) = On	<hr/>	 Dealer only
<b>32. Illumination of the Interior Cabin Light when Approaching the Vehicle</b> When approaching the vehicle with the electronic key: <input type="checkbox"/> The cabin light will not illuminate = Off <input type="checkbox"/> The cabin light will illuminate (Standard) = On	<hr/>	 Dealer only
<b>33. Center Console Spotlight</b> The center console spotlight will illuminate when POWER is in Accessory mode: <input type="checkbox"/> Off <input type="checkbox"/> On (Standard)	<hr/>	 Dealer only
<b>34. Illumination of the Outer Foot Lights when Approaching the Vehicle</b> When approaching the vehicle with the electronic key: <input type="checkbox"/> The outer foot lights will not illuminate = Off <input type="checkbox"/> The outer foot lights will illuminate (Standard) = On	<hr/>	 Dealer only
<b>35. Illumination of the Outer Foot Lights when a Door is Opened</b> When a door is opened: <input type="checkbox"/> The foot lights will not illuminate = Off <input type="checkbox"/> The foot lights will illuminate (Standard) = On	<hr/>	 Dealer only
<b>36. Reverse-Linked Rear Wiper</b> When the vehicle is placed into reverse, the rear window wiper will: <input type="checkbox"/> Operate automatically (Standard) = On <input type="checkbox"/> Not operate automatically = Off	<hr/>	 Dealer only
<b>37. Reverse-Linked Rear Wiper Operation</b> When option #36 is on, the rear window wiper will: <input type="checkbox"/> Sweep once (Standard) = On <input type="checkbox"/> Sweep continuously = Off	<hr/>	 Dealer only
<b>38. Lane Change Signal Flashes</b> Push turn signal lever partway to signal a lane change. Signal will flash: <input type="checkbox"/> Off <input type="checkbox"/> 3 times (Standard) <input type="checkbox"/> 4 times <input type="checkbox"/> 5 times <input type="checkbox"/> 6 times <input type="checkbox"/> 7 times	<hr/>	 Dealer only
<b>39. Instrument Dimming Sensitivity</b> Level of light at which the instrument panel lights will dim: <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;">               very dark           </div> <div style="text-align: center;">               dark           </div> <div style="text-align: center;">               normal              (Standard)           </div> <div style="text-align: center;">               light           </div> <div style="text-align: center;">               very light           </div> </div>	<hr/>	 Dealer only

<b>Programmable by Dealer Only (cont'd)</b>	Using the Navigation System	Dealer
<p><b>40. Instrument Restore Sensitivity</b> Level of light at which the instrument panel lights will brighten:</p> <p>  </p>	_____	 Dealer only
<p><b>41. Tilt Away of Steering Wheel</b> When vehicle is shifted into Park and ignition turned off, steering wheel can be set as follows:</p> <p> <input type="checkbox"/> Automatically move up and away from the driver position setting (Standard) = On  <input type="checkbox"/> Remain in the current position, as set by the driver = Off </p>	_____	 Dealer only
<p><b>42. Moon Roof Switch - Auto Operation</b> Pressing the open/close switch will automatically open or close the moon roof in one motion:</p> <p> <input type="checkbox"/> Off  <input type="checkbox"/> On (Standard) </p>	_____	 Dealer only
<p><b>43. Auto A/C Mode</b> When Auto A/C is selected:</p> <p> <input type="checkbox"/> It will automatically engage the air conditioner compressor to reach the set temperature (Standard) = On  <input type="checkbox"/> It will automatically achieve a set temperature, warm or cool, without engaging the air conditioner compressor* = Off  <small>*The A/C compressor will be engaged when the Auto A/C button is pressed a second time</small> </p>	_____	 Dealer only
<p><b>44. Efficient Ventilation Mode</b> When the front defogger is activated:</p> <p> <input type="checkbox"/> It will automatically engage the air conditioner compressor to blow air onto the windshield (Standard) = On  <input type="checkbox"/> It will automatically blow air onto the windshield without engaging the air conditioner compressor = Off </p>	_____	 Dealer only
<p><b>45. Linking Seat Position Memory with Door Unlock*</b> When using Smart Access to unlock the doors, seat position memory recall can be programmed as follows:</p> <p> <input type="checkbox"/> The driver seat will move to memory position when the driver door is unlocked (Standard)  <input type="checkbox"/> The driver seat will move to memory position when any door is unlocked  <small>* If equipped</small> </p>	_____	 Dealer only
<p><b>46. Power Back Door Switch Operation</b> The back door opener button can be programmed as follows:</p> <p> <input type="checkbox"/> Press button one time to open back door  <input type="checkbox"/> Press and hold the button for 0.8 seconds to open the back door (Standard) </p>	_____	 Dealer only
<p><b>47. Back Door Chime</b> The chime that sounds when opening the back door can be programmed as follows:</p> <p> <input type="checkbox"/> Start buzzer On; in-operation buzzer Off (Standard)  <input type="checkbox"/> Start buzzer Off; in-operation buzzer On </p>	_____	 Dealer only
<p><b>48. Power Back Door Electronic Key Operation</b> The button on the electronic key can be programmed as follows:</p> <p> <input type="checkbox"/> Press and hold the button to open the back door (Standard)  <input type="checkbox"/> Unlock the rear door, then press the button to open the back door </p>	_____	 Dealer only

Date \_\_\_\_\_ Customer Signature \_\_\_\_\_

Repair Order Number (Dealer only) \_\_\_\_\_

Vehicle Identification Number (Dealer only) \_\_\_\_\_