

 
# Lexus Personalized Settings

Your vehicle includes a variety of electronic features that can be programmed to your preferences. Programming of these features is performed once at no charge by your Lexus Dealer provided you obtain the service at the 6 month/5,000-mile scheduled maintenance service.




It is also possible to customize certain vehicle features yourself using the navigation system.


## Vehicles with Navigation system:

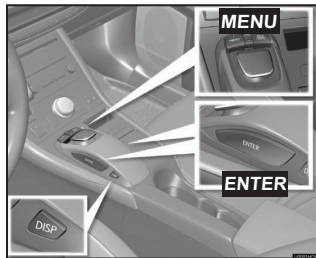


**STEP 1** Press the **MENU** button.

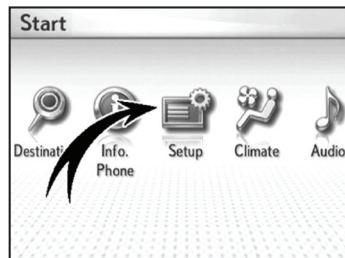 

 
**STEP 2** Select **Setup** using the Remote Touch unit and press **ENTER**.

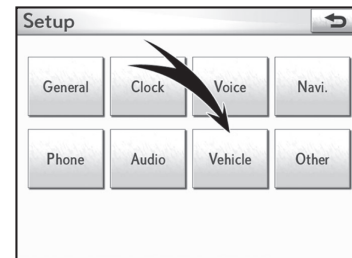

 **STEP 3** Select **Vehicle** and press **ENTER**.

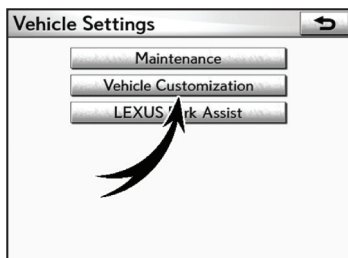

 **STEP 4** Select **Vehicle Customization** and press **ENTER**.

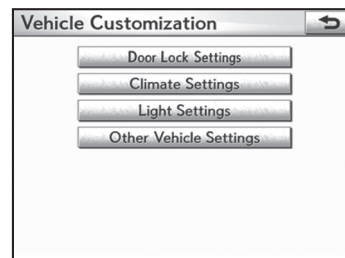

**STEP 5** Select category and press **ENTER**. Scroll to specific customization setting.

Vehicle must be in "ON" mode to program personalized settings.

 

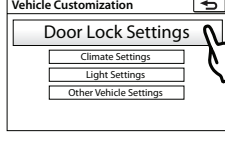 

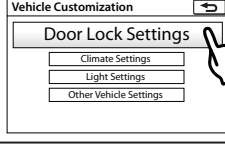 

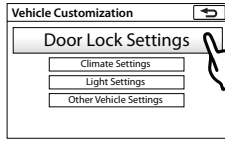 

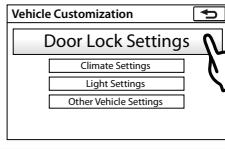 








 

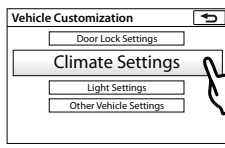 

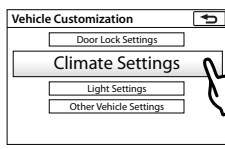 

After changing the settings, select **Save** using the Remote Touch unit and press **ENTER**.

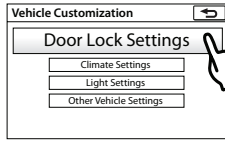




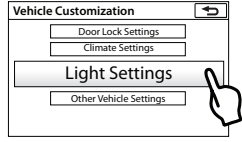 

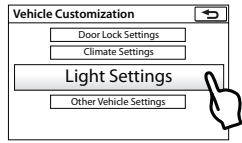 

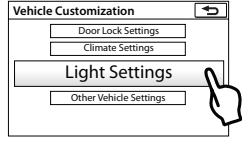 

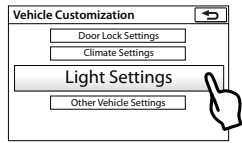 

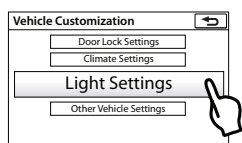 




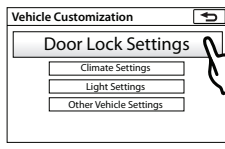











  Please refer to the 2011 CT 200h Quick Guide, or Navigation Owner's Manual for more information on Remote Touch operations.

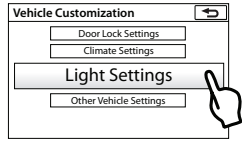





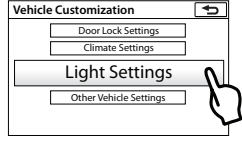



### Settings that can be customized by:

	Using the navigation system	Dealer
<h3>Door Lock Settings</h3> <p><b>1. Speed Sensitive Auto Lock</b> When the vehicle reaches 13 mph:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> The doors will not lock. (Standard) = Off</li> <li><input type="checkbox"/> All the doors will automatically lock. = On</li> </ul>		
<p><b>2. Shift-Linked Auto Lock</b> When the vehicle is taken out of park and placed into another range:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> The doors, if unlocked, will not automatically lock. = Off</li> <li><input type="checkbox"/> The doors automatically lock. (Standard) = On</li> </ul>		
<p><b>3. Shift-Linked Auto Unlock</b> When the engine is running and the vehicle is placed into park:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> All the doors will remain locked. = Off</li> <li><input type="checkbox"/> All the doors will automatically unlock. (Standard) = On</li> </ul>		
<p><b>4. Driver Door-Linked Unlock</b> When the vehicle is turned off and the driver door is opened within 10 seconds:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> All of the remaining doors will remain locked. (Standard) = Off</li> <li><input type="checkbox"/> All of the remaining doors will automatically unlock. = On</li> </ul>		
<p><b>5. Unlock on Second Key Turn</b> When using the mechanical key to unlock the doors:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> Turning the key one time will unlock all doors. = Off</li> <li><input type="checkbox"/> Turning the key one time unlocks the driver door, and two times unlocks all doors. (Standard) = On</li> </ul>		






LPS options were correct at time of development. All options are subject to change without prior notice.

Door Lock Settings (cont'd)	Using the system	Dealer
<p><b>6. Remote 2-Press Unlock</b>                      When using the electronic key to unlock the doors:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> Pressing the unlock button one time will unlock all doors. = Off</li> <li><input type="checkbox"/> Pressing the unlock button one time unlocks the driver door, and two times unlocks all doors. (Standard) = On</li> </ul>		
<p><b>7. Select Doors to Unlock</b>                      When pressing the unlock button one time on the electronic key:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> All doors will unlock (Option # 6 Remote 2-Press Unlock must be Off). = All</li> <li><input type="checkbox"/> Only driver door unlocks (Option # 6 Remote 2-Press Unlock must be On). (Standard) = Driver</li> </ul>		
<p><b>8. Access System with Elec. Key</b>                      When unlocking the doors:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> Deactivates SmartAccess, only accessible using elec. key unlock button. = Off</li> <li><input type="checkbox"/> Use SmartAccess (touch door handle) or remote buttons. (Standard) = On</li> </ul>		
<p><b>9. Auto Relock Time Adjust</b>                      When the unlock button on the electronic key is pressed and the doors are not opened:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> The doors will automatically re-lock in 30 seconds. (Standard)</li> <li><input type="checkbox"/> The doors will automatically re-lock in 60 seconds.</li> <li><input type="checkbox"/> The doors will automatically re-lock in 120 seconds.</li> <li><input type="checkbox"/> 0 seconds.</li> </ul>		
<p><b>10. Lock/Unlock Answer Back</b>                      Using the electronic key, the following functions can be programmed:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> Press the lock/unlock button and the system will not beep. = Off</li> <li><input type="checkbox"/> Press the lock/unlock button and the system will beep. (Standard) = On</li> </ul>		
<p><b>11. Lock Feedback Volume</b>                      When the lock button is pressed on the electronic key, the system volume can be programmed as follows:</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> off</div> <div style="text-align: center;"> volume 1</div> <div style="text-align: center;"> volume 2</div> <div style="text-align: center;"> volume 3</div> <div style="text-align: center;"> volume 4</div> <div style="text-align: center;"> volume 5</div> <div style="text-align: center;"> loudest (standard)</div> </div>		
<p><b>Climate Settings</b></p>		
<p><b>12. Auto A/C Mode</b>                      When Auto A/C is selected:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> It will automatically engage the air conditioner compressor to reach the set temperature. (Standard) = On</li> <li><input type="checkbox"/> It will automatically achieve a set temperature, warm or cool, without engaging the air conditioner compressor.* = Off</li> </ul> <p>* Note: The AC compressor will be engaged when the auto AC button is pressed a second time.</p>		
<p><b>13. Efficient Ventilation Mode</b>                      When the front defogger is activated:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> It will automatically blow air onto the windshield without engaging the air conditioner compressor. = Off</li> <li><input type="checkbox"/> It will automatically engage the air conditioner compressor to blow air onto the windshield. (Standard) = On</li> </ul>		

<h2>Light Settings</h2>	Using the navigation system	Dealer
<p><b>14. Light Sensor Sensitivity</b> When driving the vehicle, the front headlights can be programmed to turn ON under darker or lighter ambient light conditions. (Headlight switch must be in "AUTO" mode):</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> very dark</div> <div style="text-align: center;"> dark</div> <div style="text-align: center;"> normal (standard)</div> <div style="text-align: center;"> light</div> <div style="text-align: center;"> very light</div> </div>		
<p><b>15. Headlight Off Time Adjust</b> After turning off the ignition and all the doors are closed, if the headlights are ON or in the AUTO position:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> The headlights will turn off immediately, when the vehicle is turned off and the driver door is opened.</li> <li><input type="checkbox"/> The headlights will turn off in 30 seconds.</li> <li><input type="checkbox"/> The headlights will turn off in 60 seconds. (Standard)</li> <li><input type="checkbox"/> The headlights will turn off in 90 seconds.</li> </ul>		
<p><b>16. Daytime Running Lights</b> Illumination of daytime running lights:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> OFF.</li> <li><input type="checkbox"/> ON. (Standard)</li> </ul>		
<p><b>17. Int. Light Off Adjustment</b> After closing the door, the interior lights can be adjusted to stay on for the following:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> 15 seconds. (Standard)</li> <li><input type="checkbox"/> 7.5 seconds.</li> <li><input type="checkbox"/> 30 seconds.</li> <li><input type="checkbox"/> 0 seconds.</li> </ul>		
<p><b>18. Ext. Lights Off Time Adjust</b> After closing the door, the exterior lights can be adjusted to stay on for the following:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> 15 seconds. (Standard)</li> <li><input type="checkbox"/> 7.5 seconds.</li> <li><input type="checkbox"/> 30 seconds.</li> <li><input type="checkbox"/> 0 seconds.</li> </ul>		
<p><b>19. Instrument Dim. Sensitivity</b> Level of light required to dim the instrument panel lights:</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> very dark</div> <div style="text-align: center;"> dark</div> <div style="text-align: center;"> normal (standard)</div> <div style="text-align: center;"> light</div> <div style="text-align: center;"> very light</div> </div>		
<p><b>20. Instrument Rest. Sensitivity</b> Level of light required to brighten the instrument panel lights:</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> very light</div> <div style="text-align: center;"> light</div> <div style="text-align: center;"> normal (standard)</div> <div style="text-align: center;"> dark</div> <div style="text-align: center;"> very dark</div> </div>		
<p><b>Programmable by Dealer Only</b></p> <p><b>21. Flashing of signal lights</b> Using the electronic key, the following functions can be programmed:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> Press the lock or unlock button and the lights will not flash. = Off</li> <li><input type="checkbox"/> Press the lock button and the lights will flash once. Press the unlock button and the lights will flash twice. (Standard) = On</li> </ul>	<hr style="width: 100px; margin: 0 auto;"/>	 Dealer only

Programmable by Dealer Only (cont'd)	Using the navigation system	Dealer
<b>22. Open windows with elec. key</b> When pressing the unlock button on the electronic key for 3 seconds: <input type="checkbox"/> The windows will not roll down. (Standard) = Off <input type="checkbox"/> All the windows will roll down. = On	_____	 Dealer only
<b>23. Open windows warning*</b> When pressing the unlock button on the electronic key for 3 seconds to roll down the windows: <input type="checkbox"/> The buzzer will not sound. = Off <input type="checkbox"/> The buzzer will sound. (Standard) = On * Option #22 must be on.	_____	 Dealer only
<b>24. Opening windows using key</b> When using the mechanical key to operate the windows: <input type="checkbox"/> Turning the key right and holding the position for 2 seconds will not open the windows. (Standard) = Off <input type="checkbox"/> Turning the key right and holding the position for 2 seconds will open the windows. = On	_____	 Dealer only
<b>25. Closing windows using key</b> When using the mechanical key to operate the windows: <input type="checkbox"/> Turning the key left and holding the position for 2 seconds will not close the windows. (Standard) = Off <input type="checkbox"/> Turning the key left and holding the position for 2 seconds will close the windows. = On	_____	 Dealer only
<b>26. Automatic recirculation of air when using A/C</b> When the air conditioner is ON or in AUTO, the vehicle can be programmed for the following: <input type="checkbox"/> To automatically switch between the recirculation mode and fresh air mode as necessary to meet the temperature requirement set. (Standard) = On <input type="checkbox"/> When the climate control is turned on, the user must manually select the desired mode, recirculation or fresh air mode. = Off	_____	 Dealer only
<b>27. Interior light</b> The interior light will illuminate when POWER is switched to OFF. <input type="checkbox"/> On. (Standard) = On <input type="checkbox"/> Off. = Off	_____	 Dealer only
<b>28. Illumination of the interior cabin light when unlocking door</b> When using the electronic key or mechanical key to unlock the door, the interior cabin light can be programmed for the following: <input type="checkbox"/> The cabin light will illuminate. (Standard) = On <input type="checkbox"/> The cabin light will not illuminate. = Off	_____	 Dealer only
<b>29. Illumination of the interior cabin light when approaching the vehicle</b> When approaching the vehicle with the electronic key, the interior cabin light can be programmed for the following: <input type="checkbox"/> The cabin light will illuminate. (Standard) = On <input type="checkbox"/> The cabin light will not illuminate. = Off	_____	 Dealer only
<b>30. Cup holder light</b> The cup holder will illuminate when POWER is in ACCESSORY or ON mode: <input type="checkbox"/> On. (Standard) = On <input type="checkbox"/> Off. = Off	_____	 Dealer only
<b>31. Foot lights</b> When using the electronic key to unlock the doors: <input type="checkbox"/> The outer foot lights will illuminate. (Standard) = On <input type="checkbox"/> The outer foot lights will not illuminate. = Off	_____	 Dealer only

Settings that can be customized by:

Programmable by Dealer Only (cont'd)	Using the navigation system	Dealer
<p><b>32. Panic mode</b>                      When pressing the panic button on the electronic key:  <input type="checkbox"/> The alarm will sound intermittently and the vehicle lights will flash. (Standard) = On  <input type="checkbox"/> The alarm will not sound and the vehicle lights will not flash. = Off</p>	<p>_____</p>	<p>                      Dealer only</p>
<p><b>33. Door lock buzzer</b>                      When the lock button on the electronic key is pressed and a door is not fully closed:  <input type="checkbox"/> The buzzer will sound. (Standard) = On  <input type="checkbox"/> The buzzer will not sound. = Off</p>	<p>_____</p>	<p>                      Dealer only</p>
<p><b>34. Driver seat belt reminder</b>                      When the vehicle reaches 12mph:  <input type="checkbox"/> The driver seat belt reminder will beep. (Standard) = On  <input type="checkbox"/> The driver seat belt reminder will not beep. = Off</p>	<p>_____</p>	<p>                      Dealer only</p>
<p><b>35. Passenger seat belt reminder</b>                      When the vehicle reaches 12mph:  <input type="checkbox"/> The passenger seat belt reminder will beep. (Standard) = On  <input type="checkbox"/> The passenger seat belt reminder will not beep. = Off</p>	<p>_____</p>	<p>                      Dealer only</p>
<p><b>36. Reverse beep alert</b>                      When the vehicle is put in reverse, the interior reverse beep alert can be set to the following:  <input type="checkbox"/> Beep continuously. (Standard) = On  <input type="checkbox"/> Beep once. = Off</p>	<p>_____</p>	<p>                      Dealer only</p>

Date \_\_\_\_\_ Customer Signature \_\_\_\_\_

Repair Order Number (Dealer only)

Vehicle Identification Number (Dealer only)