

# Lexus Personalized Settings

Your vehicle includes a variety of electronic features that can be programmed to your preferences. Programming of these features is performed once at no charge, provided you obtain the service at the 30 day/1,000-mile scheduled maintenance service. Programming of your Lexus Personalized Settings requires special equipment and may be performed only by an authorized Lexus dealership.



## Door Lock Settings

---

### 1. Speed Sensitive Auto Lock

When the vehicle reaches 13 mph:

- The doors will not lock. (Standard) = Off
- All the doors will automatically lock. = On

### 2. Shift-Linked Auto Lock

When the vehicle is taken out of park and placed into another range:

- The doors, if unlocked, will not automatically lock. = Off
- The doors automatically lock. (Standard) = On

### 3. Shift-Linked Auto Unlock

When the engine is running and the vehicle is placed into park:

- All the doors will remain locked. = Off
- All the doors will automatically unlock. (Standard) = On

### 4. Driver Door-Linked Unlock

When the vehicle is turned off and the driver door is opened within 10 seconds:

- All of the remaining doors will remain locked. (Standard) = Off
- All of the remaining doors will automatically unlock. = On

### 5. Unlock on Second Key Turn

When using the mechanical key to unlock the doors:

- Turning the key one time will unlock all doors. = Off
- Turning the key one time unlocks the driver door, and two times unlocks all doors. (Standard) = On

### 6. Remote 2-Press Unlock

When using the electronic key to unlock the doors:

- Pressing the unlock button one time will unlock all doors. = Off
- Pressing the unlock button one time unlocks the driver door, and two times unlocks all doors. (Standard) = On

### 7. Select Doors to Unlock

When pressing the unlock button one time on the electronic key:

- All doors will unlock (Option # 6 Remote 2-Press Unlock must be Off). = All
- Only driver door unlocks (Option # 6 Remote 2-Press Unlock must be On). (Standard) = Driver

### 8. Access System with Electronic Key

When unlocking the doors:

- Deactivates SmartAccess, only accessible using electronic key unlock button. = Off
- Use SmartAccess (touch door handle) or remote buttons. (Standard) = On

### 9. Auto Relock Time Adjust

When the unlock button on the electronic key is pressed and the doors are not opened:

- The doors will automatically re-lock in 30 seconds.
- The doors will automatically re-lock in 60 seconds. (Standard)
- The doors will automatically re-lock in 120 seconds.

## Door Lock Settings (cont'd)

### 10. Lock Feedback Volume

 
When the lock button is pressed on the electronic key, the system volume can be programmed as follows:



## Climate Settings

### 11. Smog Sensor Sensitivity

When in AUTO recirculation mode, the sensor will determine when to switch from outside air to recirculated air based on outside air quality:



### 12. Auto A/C Mode

When Auto A/C is selected:

- It will automatically engage the air conditioner compressor to reach the set temperature. (Standard) = On
  - It will automatically achieve a set temperature, warm or cool, without engaging the air conditioner compressor.\* = Off
- \* Note: The AC compressor will be engaged when the auto AC button is pressed a second time.

### 13. Efficient Ventilation Mode

 
When the front defogger is activated:

- It will automatically blow air onto the windshield without engaging the air conditioner compressor. = Off
- It will automatically engage the air conditioner compressor to blow air onto the windshield. (Standard) = On

## Light Settings

### 14. Light Sensor Sensitivity

When driving the vehicle, the front headlights can be programmed to turn ON under darker or lighter ambient light conditions. (Headlight switch must be in "AUTO" mode):



### 15. Headlight Off Time Adjust

After turning off the ignition and all the doors are closed, if the headlights are ON or in the AUTO position:

- The headlights will turn off immediately, when the vehicle is turned off and the driver door is opened.
- The headlights will turn off in 30 seconds. (Standard)
- The headlights will turn off in 60 seconds.
- The headlights will turn off in 90 seconds.

### 16. Daytime Running Lights

Illumination of daytime running lights:

- OFF.
- ON. (Standard)

 
### 17. Int. Light Off Adjustment

After closing the door, the interior lights can be adjusted to stay on for the following:

- 15 seconds. (Standard)
- 7.5 seconds.
- 30 seconds.

### 18. Instrument Dim. Sensitivity


Level of light required to dim the instrument panel lights:



## Light Settings (cont'd)

### 19. Instrument Rest. Sensitivity

 Level of light required to brighten the instrument panel lights:



## Programmable by Dealer Only

---

### 20. Flashing of Signal Lights

Using the electronic key, the following functions can be programmed:

- Press the lock or unlock button and the lights will not flash. = Off
- Press the lock button and the lights will flash once. Press the unlock button and the lights will flash twice. (Standard) = On

### 21. Open Windows with Elec. Key

When pressing the unlock button on the electronic key for 3 seconds:

- The windows will not roll down. (Standard) = Off
- All the windows will roll down. = On

### 22. Open Windows and Moonroof with Elec. Key

When pressing the unlock button on the electronic key for 3 seconds:

- The windows will roll down and the moonroof will not open. = Off
- All the windows will roll down and the moonroof will open. (Standard) = On

Note: Option # 21 must be on.

### 23. Slide/Tilt Moonroof with Elec. Key

When option # 21 and # 22 are on, the moonroof can be programmed for the following:

- Slide. (Standard)
- Tilt.

### 24. Tilt Away of Steering Wheel

When the vehicle is placed in park, the ignition turned off, the steering wheel can be set to the following:

- Automatically move up and away from the driver position setting. (Standard) = On
- Remain in the current position, as set by the driver. = Off

### 25. Automatic Recirculation of air when using A/C

When the air conditioner is ON or in AUTO, the vehicle can be programmed for the following:

- To automatically switch between the recirculation mode and fresh air mode as necessary to meet the temperature requirement set. (Standard)
- When the climate control is turned on, the user must manually select the desired mode, recirculation or fresh air mode.

### 26. Opening the trunk

By pressing on the trunk release button, located on the electronic key, the trunk will open. The release button can be programmed as follows:

- Press button one time to release the trunk. (No delay)
- Press button two times to release the trunk.
- Press and hold button for 0.8 seconds to release the trunk. (Standard)
- The button can be turned off so the trunk cannot be opened using the electronic key.

### 27. Illumination of the interior light

When the ignition switch is turned from ACC to OFF, the interior cabin light can be programmed as follows:

- Not illuminate.
- To illuminate. (Standard)

Note: The interior cabin light must be placed in the door mode.

Date \_\_\_\_\_ Customer Signature \_\_\_\_\_

Repair Order Number (Dealer only)

Vehicle Identification Number (Dealer only)