

Lexus Personalized Settings

Your vehicle includes a variety of electronic features that can be programmed to your preferences. Programming of these features is performed once at no charge by your Lexus Dealer provided you obtain the service at the 30 day/1,000-mile scheduled maintenance service.



Door Lock Settings

1. Speed Sensitive Auto Lock

When the vehicle reaches 13 mph:

- The doors will not lock. (Standard) = Off
 - All the doors will automatically lock. = On
- * Automatic Transmission only

2. Shift-Linked Auto Lock

When the vehicle is taken out of park and placed into another range:

- The doors, if unlocked, will not automatically lock. = Off
 - The doors automatically lock. (Standard) = On
- * Automatic Transmission only

3. Shift-Linked Auto Unlock

When the engine is running and the vehicle is placed into park:

- All the doors will remain locked. = Off
 - All the doors will automatically unlock. (Standard) = On
- * Automatic Transmission only

4. Driver Door-Linked Unlock

When the vehicle is turned off and the driver door is opened within 10 seconds:

- All of the remaining doors will remain locked. (Standard) = Off
 - All of the remaining doors will automatically unlock. = On
- * Automatic Transmission only

5. Unlock on Second Key Turn

When using the mechanical key to unlock the doors:

- Turning the key one time will unlock all doors. = Off
- Turning the key one time unlocks the driver door, and two times unlocks all doors. (Standard) = On

6. Remote 2-Press Unlock

When using the electronic key to unlock the doors:

- Pressing the unlock button one time will unlock all doors. = Off
- Pressing the unlock button one time unlocks the driver door, and two times unlocks all doors. (Standard) = On

7. Access System with Elec. Key

When unlocking the doors:

- Deactivates SmartAccess, only accessible using elec. key unlock button. = Off
- Use SmartAccess (touch door handle) or remote buttons. (Standard) = On

8. Auto Relock Time Adjust

When the unlock button on the electronic key is pressed and the doors are not opened:

- The doors will automatically re-lock in 30 seconds.
- The doors will automatically re-lock in 60 seconds. (Standard)
- The doors will automatically re-lock in 120 seconds.

9. Lock/Unlock Answer Back


Using the electronic key, the following functions can be programmed:

- Press the lock/unlock button and the system will not beep. = Off
- Press the lock/unlock button and the system will beep. (Standard) = On

Climate Settings

10. Smog Sensor Sensitivity

When in AUTO recirculation mode, the sensor will determine when to switch from outside air to recirculated air based on outside air quality:

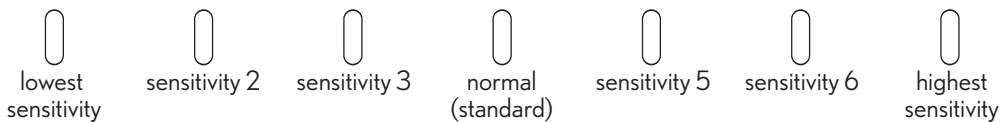

* IS 350-C only

11. Auto A/C Mode

When Auto A/C is selected:

- It will automatically engage the air conditioner compressor to reach the set temperature. (Standard) = Automatic
- It will automatically achieve a set temperature, warm or cool, without engaging the air conditioner compressor.* = Manual

* Note: The AC compressor will be engaged when the auto AC button is pressed a second time.

12. Efficient Ventilation Mode

When the front defogger is activated:

- It will automatically blow air onto the windshield without engaging the air conditioner compressor. = Off
- It will automatically engage the air conditioner compressor to blow air onto the windshield. (Standard) = On

13. Automatic Recirculation of air when using A/C


When the air conditioner is ON or in AUTO, the vehicle can be programmed for the following:

- To automatically switch between the recirculation mode and fresh air mode as necessary to meet the temperature requirement set. (Standard) = Automatic
- When the climate control is turned on, the user must manually select the desired mode, recirculation or fresh air mode. = Manual

Light Settings

14. Light Sensor Sensitivity

When driving the vehicle, the front headlights can be programmed to turn ON under darker or lighter ambient light conditions. (Headlight switch must be in "AUTO" mode):

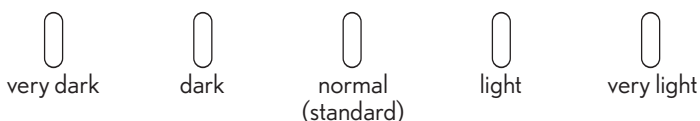

15. Headlight Off Time Adjust

After turning off the ignition and all the doors are closed, if the headlights are ON or in the AUTO position:

- The headlights will turn off immediately, when the vehicle is turned off and the driver door is opened.
- The headlights will turn off in 30 seconds. (Standard)
- The headlights will turn off in 60 seconds.
- The headlights will turn off in 90 seconds.

16. Daytime Running Lights

Illumination of daytime running lights:

- OFF.
- ON. (Standard)

17. Int. Light Off Adjustment

After closing the door, the interior lights can be adjusted to stay on for the following:

- 15 seconds. (Standard)
- 7.5 seconds.
- 30 seconds.

Light Settings (cont'd)


18. Ext. Lights Off Time Adjust

After closing the door, the exterior lights can be adjusted to stay on for the following:

- 15 seconds. (Standard)
- 7.5 seconds.
- 30 seconds.


19. Instrument Dim. Sensitivity

Level of light required to dim the instrument panel lights:

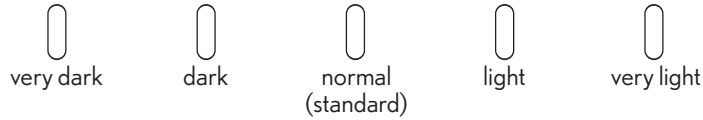

20. Instrument Rest. Sensitivity

Level of light required to brighten the instrument panel lights:

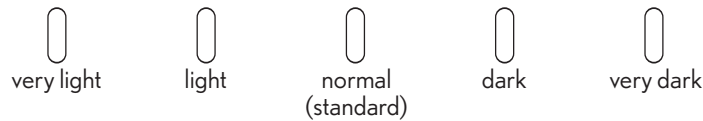

21. Flashing of Signal Lights

Using the electronic key, the following functions can be programmed:

- Press the lock or unlock button and the lights will not flash. = Off
- Press the lock button and the lights will flash once. Press the unlock button and the lights will flash twice. (Standard) = On

Other Vehicle Settings

22. Open Windows with Elec. Key

When pressing the unlock button on the electronic key for 3 seconds:

- The windows will not roll down. = Off
- All the windows will roll down. (Standard) = On

23. Tilt Away of Steering Wheel

When the vehicle is placed in park, the ignition turned off, the steering wheel can be set to the following:

- Automatically move up and away from the driver position setting. (Standard) = On
- Remain in the current position, as set by the driver. = Off

Date _____ Customer Signature _____

Repair Order Number (Dealer only) _____

Vehicle Identification Number (Dealer only) _____