

Lexus Personalized Settings

Your vehicle includes a variety of electronic features that can be programmed to your preferences. Programming of these features is performed once at no charge, provided you obtain the service at the 30 day/1,000-mile scheduled maintenance service. Programming of your Lexus Personalized Settings requires special equipment and may be performed only by an authorized Lexus dealership.



Door Lock Settings

1. Speed Sensitive Auto Lock

When the vehicle reaches 13 mph:

- The doors will not lock. (Standard) = Off
- All the doors will automatically lock. = On

2. Shift-Linked Auto Lock

When the vehicle is taken out of park and placed into another range:

- The doors, if unlocked, will not automatically lock. = Off
- The doors automatically lock. (Standard) = On

3. Shift-Linked Auto Unlock

When the engine is running and the vehicle is placed into park:

- All the doors will remain locked. = Off
- All the doors will automatically unlock. (Standard) = On

4. Driver Door-Linked Unlock

When the vehicle is turned off and the driver door is opened within 10 seconds:

- All of the remaining doors will remain locked. (Standard) = Off
- All of the remaining doors will automatically unlock. = On

5. Unlock on Second Key Turn

When using the mechanical key to unlock the doors:

- Turning the key one time will unlock all doors. = Off
- Turning the key one time unlocks the driver door, and two times unlocks all doors. (Standard) = On

6. Remote 2-Press Unlock

When using the electronic key to unlock the doors:

- Pressing the unlock button one time will unlock all doors. = Off
- Pressing the unlock button one time unlocks the driver door, and two times unlocks all doors. (Standard) = On

7. Select Doors to Unlock

When pressing the unlock button one time on the electronic key:

- All doors will unlock (Option # 6 Remote 2-Press Unlock must be Off). = All
- Only driver door unlocks (Option # 6 Remote 2-Press Unlock must be On). (Standard) = Driver

8. Access System with Elec. Key

When unlocking the doors:

- Deactivates SmartAccess, only accessible using elec. key unlock button. = Off
- Use SmartAccess (touch door handle) or remote buttons. (Standard) = On

9. Auto Relock Time Adjust

 
When the unlock button on the electronic key is pressed and the doors are not opened:

- The doors will automatically re-lock in 30 seconds.
- The doors will automatically re-lock in 60 seconds. (Standard)
- The doors will automatically re-lock in 120 seconds.

Climate Settings

10. Smog Sensor Sensitivity

When in AUTO recirculation mode, the sensor will determine when to switch from outside air to recirculated air based on outside air quality:



11. Auto A/C Mode

When Auto A/C is selected:

- It will automatically engage the air conditioner compressor to reach the set temperature. (Standard) = On
- It will automatically achieve a set temperature, warm or cool, without engaging the air conditioner compressor.* = Off

* Note: The AC compressor will be engaged when the auto AC button is pressed a second time.

12. Efficient Ventilation Mode

 
When the front defogger is activated:

- It will automatically blow air onto the windshield without engaging the air conditioner compressor. = Off
- It will automatically engage the air conditioner compressor to blow air onto the windshield. (Standard)= On

Light Settings

13. Light Sensor Sensitivity

When driving the vehicle, the front headlights can be programmed to turn ON under darker or lighter ambient light conditions. (Headlight switch must be in "AUTO" mode):



14. Headlight Off Time Adjust

After turning off the ignition and all the doors are closed, if the headlights are ON or in the AUTO position:

- The headlights will turn off immediately, when the vehicle is turned off and the driver door is opened.
- The headlights will turn off in 30 seconds. (Standard)
- The headlights will turn off in 60 seconds.
- The headlights will turn off in 90 seconds.

15. Daytime Running Lights

Illumination of daytime running lights:

- OFF.
- ON. (Standard)

16. Int. Light Off Adjustment

After closing the door, the interior lights can be adjusted to stay on for the following:

- 15 seconds. (Standard)
- 7.5 seconds.
- 30 seconds.

 
17. Ext. Lights Off Time Adjust

After closing the door, the exterior lights can be adjusted to stay on for the following:

- 15 seconds. (Standard)
- 7.5 seconds.
- 30 seconds.
- 0 seconds.

18. Instrument Dim. Sensitivity

Level of light required to dim the instrument panel lights:



19. Instrument Rest. Sensitivity

Level of light required to brighten the instrument panel lights:



20. Lane Change Signal Flashes

Push the turn signal lever partway to signal a lane change, it will flash:



Other Vehicle Settings

21. Driver's Seat Easy Exit

When the vehicle is placed in park, the ignition turned off, the driver seat can be set to the following:

- Remain in the current position, as set by the driver. = Off
- Automatically move away from the steering wheel partially. = Partial
- Automatically move away from the steering wheel fully. = Full (Standard)

22. Flashing of Signal Lights

Using the electronic key, the following functions can be programmed:

- Press the lock or unlock button and the lights will not flash. = Off
- Press the lock button and the lights will flash once. Press the unlock button and the lights will flash twice. (Standard) = On

23. Open Windows with Elec. Key

When pressing the unlock button on the electronic key for 3 seconds:

- The windows will not roll down. (Standard) = Off
- All the windows will roll down. = On

24. Open Windows and Moonroof with Elec. Key

When pressing the unlock button on the electronic key for 3 seconds:

- The windows will roll down and the moonroof will not open. = Off
- All the windows will roll down and the moonroof will open. (Standard) = On

* Note: Option # 23 must be on.

25. Slide/Tilt Moonroof with Elec. Key

When option # 23 and # 24 are on, the moonroof can be programmed for the following:

- Slide. (Standard)
- Tilt.

26. Tilt Away of Steering Wheel

When the vehicle is placed in park, the ignition turned off, the steering wheel can be set to the following:

- Automatically move up and away from the driver position setting. (Standard) = On
- Remain in the current position, as set by the driver. = Off

27. Opening the Trunk

By pressing on the trunk release button, located on the electronic key, the trunk will open. The release button can be programmed as follows:

- Press button one time to release the trunk. (No delay)
- Press button two times to release the trunk.
- Press and hold button for 0.8 seconds to release the trunk. (Standard)
- The button can be turned off so the trunk cannot be opened using the electronic key.

28. Automatic Recirculation of air when using A/C

When the air conditioner is ON or in AUTO, the vehicle can be programmed for the following:

- To automatically switch between the recirculation mode and fresh air mode as necessary to meet the temperature requirement set. (Standard)
- When the climate control is turned on, the user must manually select the desired mode, recirculation or fresh air mode.

Date _____ Customer Signature _____