


Lexus Personalized Settings


Your vehicle includes a variety of electronic features that can be programmed to your preferences. The programming of these features is performed once at no charge by your Lexus Dealer provided you obtain the service at the 6-month/5,000-mile scheduled maintenance service.

It is also possible to customize certain vehicle features yourself using the vehicle's display screen. Vehicle must be in "On" mode to program personalized settings.

To customize your vehicle's settings:

1. Touch the Settings icon  on the lower left side of the main menu screen.
2. Scroll down the menu and select "Vehicle Customize."
3. Select the desired categories for customization.

There are three methods of making changes through the display, as seen here: an On/Off toggle, an adjustable slider and a link to multiple settings options.

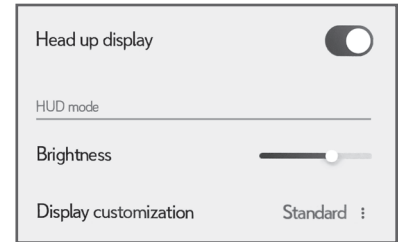

SERVICE

BY LEXUS

2024

ES 350/300h/300h F

Programmable by Guest

LIGHTS

Headlights: Auto on sensitivity

The front headlights can be programmed to turn On under varying degrees of ambient light conditions (headlight switch must be in Auto mode).

- o Brighter
- o Bright
- o Normal (Default)
- o Dark
- o Darker

Headlights: Auto off timer

The front headlights can be programmed to turn Off after a certain delay once the ignition is turned off and all the doors are closed (headlight switch must be in On or Auto mode).

- o 90 seconds
- o 60 seconds
- o 30 seconds (Default)
- o Off

Headlights: Daytime running lights

The daytime running lights make your vehicle more visible to other drivers during daytime driving.

- o On (Default)
- o Off

Exterior lights: Auto off timer

The exterior lights can be programmed to stay on for a certain length of time after closing the door.

- o 30 seconds
- o 15 seconds (Default)
- o 7.5 seconds
- o Off

Interior lights: Auto off timer

The interior lights can be adjusted to stay on after closing the door.

- o 30 seconds
- o 15 seconds (Default)
- o 7.5 seconds
- o Off

Programmable by Guest (continued)

DOOR CONTROL

Door auto lock/unlock: Auto lock

The automatic door locking function is programmable.

- o By speed = The doors automatically lock when the vehicle speed is 12 mph or higher
- o By shift from park (Default) = The doors automatically lock when the vehicle is taken out of Park and shifted into another range
- o Off = The doors will not automatically lock

Door auto lock/unlock: Auto unlock

The automatic door unlocking function is programmable.

- o By shift to park (Default) = The doors automatically unlock when the vehicle is shifted into Park
- o By driver door = All the doors automatically unlock when the driver door is opened
- o Off = The doors will not automatically unlock

Wireless electronic key: 2-press unlock

The unlock button on the electronic key is programmable.

- o On (Default) = Pressing the unlock button one time unlocks the driver's door and two times unlocks all doors
- o Off = Pressing the unlock button one time unlocks all doors

Wireless electronic key: Lock when door opened

Pressing lock button on electronic key will lock doors when they are open:

- o On (Default)
- o Off

Smart access doors: Unlock

The smart access system can be used to unlock the doors.

- o All doors = Gripping the driver door handle will unlock all doors
- o Driver door only (Default) = Gripping the driver door handle will unlock the driver's door

Key settings: Auto relock timer

If the doors are unlocked but not opened, they can be programmed to automatically relock after a certain length of time.

- o 120 seconds
- o 60 seconds (Default)
- o 30 seconds
- o Off

Key settings: Feedback lights

The flashing lights after the lock or unlock button on the electronic key is pressed can be programmed.

- o On (Default) = Lock button makes lights flash once/Unlock button makes lights flash twice
- o Off = Lights will not flash

Key settings: Feedback tone

The tone volume after the lock button on the electronic key is pressed can be programmed.

- o Drag the slider to adjust the volume of the tone

BOARDING & EXIT

Driver easy exit: Seat slide*

When the vehicle is placed in Park and the ignition turned Off, the driver seat will:

- o Full (Default) = Automatically move fully away from the steering wheel
- o Partial = Automatically move partially away from the steering wheel
- o Off = Remain in the current position, as set by the driver

Programmable by Guest (continued)

BOARDING & EXIT (continued)

Driver easy exit: Steering column*

When vehicle is shifted into Park and engine switch turned to ACC or off, steering wheel will automatically move to facilitate the driver's exit from the vehicle.

- o Tilt (Default) = Automatically tilt up from the driver
- o Telescopic = Automatically move away from the driver
- o Tilt & telescopic = Automatically tilt up and move away from the driver
- o Off = Remain in the current position

CLIMATE

Auto seat temperature: Front left*

Adjust the sensitivity level for climate controlled (A/C, heater) driver seat.

- o +2
- o +1
- o 0 (Default)
- o -1
- o -2

Auto seat temperature: Front right*

Adjust the sensitivity level for climate controlled (A/C, heater) front passenger seat.

- o +2
- o +1
- o 0 (Default)
- o -1
- o -2

Steering wheel temperature: Operation time*

Adjust the time when the heated steering wheel automatically turns off.

- o +2 = Very short
- o +1 = Short
- o 0 (Default) = Normal
- o -1 = Long
- o -2 = Very long

Auto climate settings: A/C mode with AUTO

When Auto AC is selected:

- o On (Default) = It will automatically engage the air conditioner compressor to reach the set temperature
- o Off = It will automatically achieve the set temperature, warm or cool, without engaging the air conditioner compressor**

** The A/C compressor will be engaged when the Auto A/C button is pressed a second time.

Auto climate settings: Smog sensitivity

When in Auto recirculation mode, the sensor will determine when to switch from outside air to recirculated air based on outside air quality.

- o +3
- o +2
- o +1
- o 0 (Default)
- o -1
- o -2
- o -3

1	<p>Efficient Ventilation Mode</p> <p>When the front defogger is activated:</p> <ul style="list-style-type: none"> o It will automatically engage the air conditioner compressor to blow air onto the windshield (Default) = On o It will automatically blow air onto the windshield without engaging the air conditioner compressor = Off
2	<p>Unlock on Second Key Turn</p> <p>When using the mechanical key to unlock the doors:</p> <ul style="list-style-type: none"> o Turning the key right and holding the position for 2 seconds will not close the windows and moon roof = Off o Turning the key right and holding the position for 2 seconds will close the windows and moon roof (Default) = On
3	<p>Trunk Link with Door Lock</p> <p>When using the electronic key to lock/unlock both doors:</p> <ul style="list-style-type: none"> o The trunk will not lock/unlock = Off o The trunk will lock/unlock (Default) = On
4	<p>Illumination of the Interior Cabin Light when Approaching the Vehicle</p> <p>When approaching the vehicle with the electronic key:</p> <ul style="list-style-type: none"> o The cabin light will not illuminate = Off o The cabin light will illuminate (Default) = On
5	<p>Illumination of the Interior Cabin Light when Unlocking Door</p> <p>When using the electronic or mechanical key to unlock the door:</p> <ul style="list-style-type: none"> o The cabin light will not illuminate = Off o The cabin light will illuminate (Default) = On
6	<p>Interior Light</p> <p>The interior light will illuminate when Power is switched to Off:</p> <ul style="list-style-type: none"> o Off o On (Default)
7	<p>Illumination of the Outer Foot Lights when Approaching the Vehicle</p> <p>When approaching the vehicle with the electronic key:</p> <ul style="list-style-type: none"> o The outer foot lights will not illuminate = Off o The outer foot lights will illuminate (Default) = On
8	<p>Illumination of the Outer Foot Lights when Unlocking Door</p> <p>When unlocking the vehicle with the electronic key:</p> <ul style="list-style-type: none"> o The outer foot lights will not illuminate = Off o The outer foot lights will illuminate (Default) = On
9	<p>Headlight Illumination Linked to Windshield Wiper</p> <p>If wipers are used in daylight with headlight switch in Auto mode, the headlights will turn on automatically:</p> <ul style="list-style-type: none"> o Off o On (Default)
10	<p>Instrument Dimming Sensitivity</p> <p>Level of light at which the instrument panel lights will dim:</p> <ul style="list-style-type: none"> o Very Dark o Dark o Normal (Default) o Light o Very Light

11	<p>Instrument Restore Sensitivity</p> <p>Level of light at which the instrument panel lights will brighten:</p> <ul style="list-style-type: none"> o Very Light o Light o Normal (Default) o Dark o Very Dark
12	<p>Automatic Rear Sunshade*</p> <p>The rear sunshade automatically lowers when the shift lever is shifted into Reverse.</p> <ul style="list-style-type: none"> o Off o On (Default)
13	<p>Rear Sunshade Reverse Timer*</p> <p>When option #12 is on, the rear sunshade will automatically lower in:</p> <ul style="list-style-type: none"> o 0.7 seconds (Default) o 1.2 seconds o 0.9 seconds o 0 seconds
14	<p>Automatic Mirror Fold and Extend</p> <p>Select when mirrors should fold and extend:</p> <ul style="list-style-type: none"> o Fold linked with Power switch o Fold linked with door lock (Default) o Don't fold = Off
15	<p>Close Windows and Moon Roof* with Mechanical Key</p> <p>When using the mechanical key to operate windows and moon roof:</p> <ul style="list-style-type: none"> o Turning the key right and holding the position for 2 seconds will not close the windows and moon roof (Default) = Off o Turning the key right and holding the position for 2 seconds will close the windows and moon roof = On
16	<p>Open Windows and Moon Roof* with Mechanical Key</p> <p>When using the mechanical key to operate windows and moon roof:</p> <ul style="list-style-type: none"> o Turning the key left and holding the position for 2 seconds will not open the windows and moon roof (Default) = Off o Turning the key left and holding the position for 2 seconds will open the windows and moon roof = On
17	<p>Open Windows and Moon Roof* with Electronic Key</p> <p>When pressing the unlock button on the electronic key for 3 seconds:</p> <ul style="list-style-type: none"> o The windows and moon roof will not open (Default) = Off o All the windows and moon roof will open = On
18	<p>Open Window Buzzer</p> <p>When the lock button on the electronic key is pressed and a window is not fully closed:</p> <ul style="list-style-type: none"> o The buzzer will not sound = Off o The buzzer will sound (Default) = On
19	<p>Open Moon Roof* Buzzer</p> <p>When the lock button on the electronic key is pressed and the moon roof is not fully closed:</p> <ul style="list-style-type: none"> o The buzzer will not sound = Off o The buzzer will sound (Default) = On

20	<p>Moon Roof* Switch - Auto Operation</p> <p>Pressing the open/close switch will automatically open or close the moon roof in one motion:</p> <ul style="list-style-type: none"> ○ Off ○ On (Default)
21	<p>Slide/Tilt Moon Roof* with Mechanical Key</p> <p>When option #16 is on, the moon roof can be programmed to::</p> <ul style="list-style-type: none"> ○ Slide (Default) ○ Tilt
22	<p>Slide/Tilt Moon Roof* with Electronic Key</p> <p>When option #17 is on, the moon roof can be programmed to::</p> <ul style="list-style-type: none"> ○ Slide (Default) ○ Tilt
23	<p>Linking Seat Position Memory with Door Unlock*</p> <p>When Smart Access is used to unlock the doors, seat position memory recall will function as follows:</p> <ul style="list-style-type: none"> ○ The driver seat will move to memory position when the driver door is unlocked (Default) = Driver's Door ○ The driver seat will move to memory position when any door is unlocked = Any Door
24	<p>Driver Seat Belt Reminder</p> <p>When the vehicle reaches 12 mph:</p> <ul style="list-style-type: none"> ○ The driver seat belt reminder will not beep = Off ○ The driver seat belt reminder will beep (Default) = On
25	<p>Front Passenger Seat Belt Reminder</p> <p>When the vehicle reaches 12 mph:</p> <ul style="list-style-type: none"> ○ The passenger seat belt reminder will not beep = Off ○ The passenger seat belt reminder will beep (Default) = On
26	<p>Rear Right Passenger Seat Belt Reminder</p> <p>When the vehicle reaches 12 mph:</p> <ul style="list-style-type: none"> ○ The passenger seat belt reminder will not beep = Off ○ The passenger seat belt reminder will beep (Default) = On
27	<p>Rear Left Passenger Seat Belt Reminder</p> <p>When the vehicle reaches 12 mph:</p> <ul style="list-style-type: none"> ○ The passenger seat belt reminder will not beep = Off ○ The passenger seat belt reminder will beep (Default) = On
28	<p>Rear Center Passenger Seat Belt Reminder</p> <p>When the vehicle reaches 12 mph:</p> <ul style="list-style-type: none"> ○ The passenger seat belt reminder will not beep = Off ○ The passenger seat belt reminder will beep (Default) = On
29	<p>Lane Change Signal Flashes</p> <p>When the turn signal lever is pushed partway to signal a lane change, the signal will flash:</p> <ul style="list-style-type: none"> ○ Off ○ 3 times (Default) ○ 4 times ○ 5 times ○ 6 times ○ 7 times

30	<p>Lane Change Flasher Volume</p> <p>The turn signal volume can be programmed:</p> <ul style="list-style-type: none"> ○ Loud ○ Medium (Default) ○ Soft
31	<p>Suggestion Function</p> <p>Suggestion messages for headlight operation and power window lock displayed on the Multi-Information Display:</p> <ul style="list-style-type: none"> ○ Off ○ On While Stopped ○ On (Default)
32	<p>Access System with Electronic Key</p> <p>Unlock the doors with:</p> <ul style="list-style-type: none"> ○ Electronic key unlock button (deactivates Smart Access) = Off ○ Smart Access (touch door handle) or electronic key (Default) = On
33	<p>Door Lock Buzzer</p> <p>When the lock button on the electronic key is pressed and a door is not fully closed:</p> <ul style="list-style-type: none"> ○ The buzzer will not sound = Off ○ The buzzer will sound (Default) = On
34	<p>Panic Mode</p> <p>When pressing the panic button on the electronic key:</p> <ul style="list-style-type: none"> ○ The alarm will not sound and the vehicle lights will not flash = Off ○ The alarm will sound intermittently and the vehicle lights will flash (Default) = On
35	<p>Opening the Trunk</p> <p>Pressing the trunk release button on the electronic key will open the trunk. The release button can be programmed as follows:</p> <ul style="list-style-type: none"> ○ Press button one time to release the trunk (no delay) ○ Press button two times to release the trunk ○ Press and hold button for 0.8 seconds to release the trunk (Default) ○ Press and hold button for 2 seconds to release the trunk ○ The button can be turned off so the trunk cannot be opened using the electronic key
36	<p>Wireless Remote Window Operation Buzzer</p> <p>When option #17 is on, and the wireless remote is used to open windows:</p> <ul style="list-style-type: none"> ○ The buzzer will not sound = Off ○ The buzzer will sound (Default) = On

Date
Customer Signature

Repair Order Number (Dealer only)
Vehicle Identification Number (Dealer only)