

# Lexus Personalized Settings

Your vehicle includes a variety of electronic features that can be programmed to your preferences. The programming of these features is performed once at no charge by your Lexus Dealer provided you obtain the service at the 30-day/1,000-mile scheduled maintenance service.



 
It is also possible to customize certain vehicle features yourself using the navigation system screen.

## Vehicles with Navigation System:

Vehicle must be in "On" mode to program personalized settings.

Use the touchpad to navigate and select.

Please refer to the 2019 LC 500h Quick Guide or Navigation Owner's Manual for more information on Remote Touch operations.

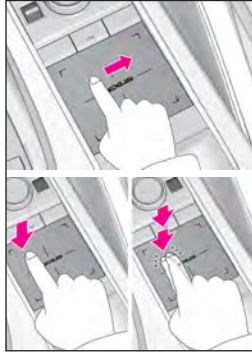

STEP 1 Press the **MENU** button.



STEP 2 Slide your finger across the touchpad to highlight **Setup**. Push down, or double tap on the touchpad to select.



STEP 3 Select **Vehicle**.



STEP 4 Select **Vehicle Customization**.



STEP 5 Select category and scroll to specific customization setting.

### Door Lock Settings

#### 1. Automatic Door Lock

The automatic door locks can be programmed as follows:

- The doors automatically lock when the vehicle speed is 12 mph or higher = By speed
- The doors automatically lock when the vehicle is taken out of Park and shifted into another range (Standard) = By shift from P
- The doors will not automatically lock = Off

#### 2. Automatic Door Unlock

The automatic door locks can be programmed as follows:

- The doors automatically unlock when the vehicle is shifted into Park (Standard) = By shift to P
- All the doors automatically unlock when the driver door is opened = By driver door
- The doors will not automatically unlock = Off

#### 3. Remote 2-Press Unlock

When using the electronic key to unlock the doors:

- Pressing the unlock button one time unlocks all doors = Off
- Pressing the unlock button one time unlocks the driver's door and two times unlocks all doors (Standard) = On

 
 
 
 
#### 4. Wireless Lock when Door Opened



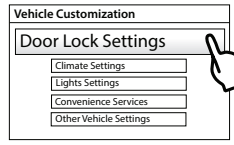

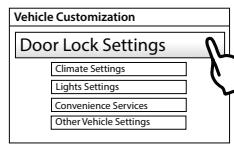

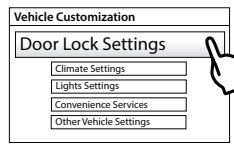

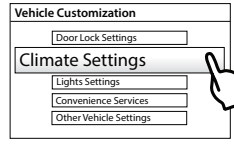

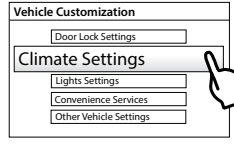

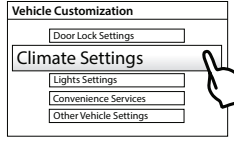

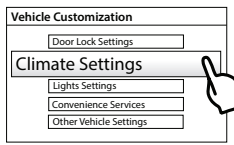

Pressing the lock button on electronic key will lock doors when they are open:






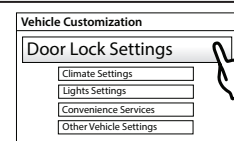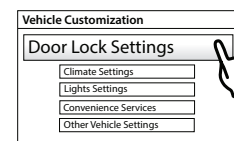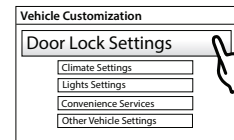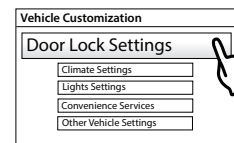



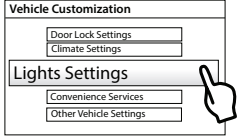

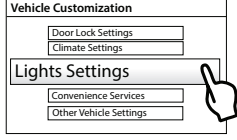

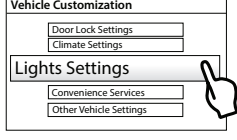

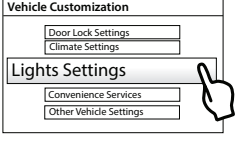

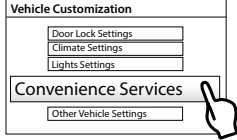

- Off
- On (Standard)

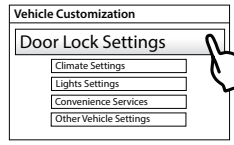


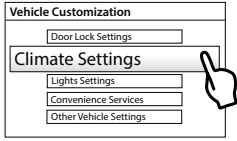



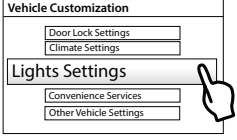


### Settings that can be customized by:

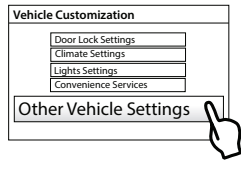










Using the Navigation System	Dealer























Door Lock Settings (cont'd)	Using the Navigation System	Dealer
<p><b>5. Select Doors to Unlock</b>                      When using Smart Access to unlock the doors:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> Gripping the driver door handle will unlock all doors = All doors</li> <li><input type="checkbox"/> Gripping the driver door handle will unlock the driver's door (Standard) = Driver's door</li> </ul>		
<p><b>6. Auto Re-lock Timer</b>                      When the doors are unlocked and not opened:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> They will automatically re-lock in 120 seconds</li> <li><input type="checkbox"/> They will automatically re-lock in 60 seconds (Standard)</li> <li><input type="checkbox"/> They will automatically re-lock in 30 seconds</li> <li><input type="checkbox"/> They will not re-lock = Off</li> </ul>		
<p><b>7. Lock/Unlock Feedback - Lights</b>                      When the lock or unlock button on the electronic key is pressed:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> Lights will not flash = Off</li> <li><input type="checkbox"/> Lock button makes lights flash once/Unlock button makes lights flash twice (Standard) = On</li> </ul>		
<p><b>8. Lock/Unlock Feedback - Tone</b>                      When the lock button is pressed on the electronic key, the system volume can be programmed as follows:</p> <p> <input type="checkbox"/> Off                        <input type="checkbox"/> Volume 1                        <input type="checkbox"/> Volume 2                        <input type="checkbox"/> Volume 3                        <input type="checkbox"/> Volume 4                        <input type="checkbox"/> Volume 5 (Standard)                        <input type="checkbox"/> Volume 6                        <input type="checkbox"/> Volume 7                 </p>		
<p><b>Climate Settings</b></p> <p><b>9. Auto Seat Temperature FR L (Front Left)*</b>                      Sensitivity level for climate controlled (A/C, heater) driver seat:</p> <p> <input type="checkbox"/> Very high                        <input type="checkbox"/> High                        <input type="checkbox"/> Normal (Standard)                        <input type="checkbox"/> Low                        <input type="checkbox"/> Very low                 </p> <p>*If equipped</p>		
<p><b>10. Auto Seat Temperature FR R (Front Right)*</b>                      Sensitivity level for climate controlled (A/C, heater) passenger seat:</p> <p> <input type="checkbox"/> Very high                        <input type="checkbox"/> High                        <input type="checkbox"/> Normal (Standard)                        <input type="checkbox"/> Low                        <input type="checkbox"/> Very low                 </p> <p>*If equipped</p>		
<p><b>11. Auto Heated Steering Wheel Time</b>                      Adjust the length of time when the automatic heated steering wheel turns off:</p> <p> <input type="checkbox"/> Shorter                        <input type="checkbox"/> Short                        <input type="checkbox"/> Normal (Standard)                        <input type="checkbox"/> Long                        <input type="checkbox"/> Longer                 </p>		
<p><b>12. Smog Sensor Sensitivity</b>                      When in Auto recirculation mode, the sensor will determine when to switch from outside air to recirculated air based on outside air quality:</p> <p> <input type="checkbox"/> Lowest sensitivity                        <input type="checkbox"/> Sensitivity 2                        <input type="checkbox"/> Sensitivity 3                        <input type="checkbox"/> Normal (Standard)                        <input type="checkbox"/> Sensitivity 5                        <input type="checkbox"/> Sensitivity 6                        <input type="checkbox"/> Highest sensitivity                 </p>		

Climate Settings (cont'd)	Using the Navigation System	Dealer
<p><b>13. Auto A/C Mode</b>                      When Auto A/C is selected:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> It will automatically engage the air conditioner compressor to reach the set temperature (Standard) = On</li> <li><input type="checkbox"/> It will automatically achieve a set temperature, warm or cool, without engaging the air conditioner compressor* = Off</li> </ul> <p>*The A/C compressor will be engaged when the Auto A/C button is pressed a second time</p>		
<p><b>Lights Settings</b></p> <p><b>14. Headlights Auto-On Sensitivity</b>                      The front headlights can be programmed to turn On under varying degrees of ambient light conditions (headlight switch must be in Auto mode):</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> Very dark</div> <div style="text-align: center;"> Dark</div> <div style="text-align: center;"> Normal (Standard)</div> <div style="text-align: center;"> Light</div> <div style="text-align: center;"> Very light</div> </div>		
<p><b>15. Headlights Auto-Off Timer</b>                      When the ignition is turned off and all the doors are closed (headlight switch must be in On or Auto mode):</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> The headlights will turn off in 90 seconds</li> <li><input type="checkbox"/> The headlights will turn off in 60 seconds</li> <li><input type="checkbox"/> The headlights will turn off in 30 seconds (Standard)</li> <li><input type="checkbox"/> The headlights will turn off immediately when the vehicle is turned off and the driver door is opened</li> </ul>		
<p><b>16. Daytime Running Lights</b>                      Illumination of daytime running lights:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> Off</li> <li><input type="checkbox"/> On (Standard)</li> </ul>		
<p><b>17. Interior Lights Auto-Off Timer</b>                      The interior lights can be adjusted to stay on after closing the door for:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> 30 seconds</li> <li><input type="checkbox"/> 15 seconds (Standard)</li> <li><input type="checkbox"/> 7.5 seconds</li> <li><input type="checkbox"/> Off</li> </ul>		
<p><b>18. Exterior Lights Auto-Off Timer</b>                      The exterior lights can be adjusted to stay on after closing the door for:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> 30 seconds</li> <li><input type="checkbox"/> 15 seconds (Standard)</li> <li><input type="checkbox"/> 7.5 seconds</li> <li><input type="checkbox"/> Off</li> </ul>		
<p><b>Convenience Services</b></p> <p><b>19. Convenience Services (Suggestion Function)</b>                      Suggestion messages for headlight operation and power window lock displayed on the Multi-Information Display:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> On (Standard)</li> <li><input type="checkbox"/> On while stopped</li> <li><input type="checkbox"/> Off</li> </ul>		

<b>Other Vehicle Settings</b>	Using the Navigation System	Dealer
<p><b>20. Steering Column Easy Exit*</b></p> <p>When the vehicle is shifted into Park and the ignition turned Off, the steering wheel can be set as follows:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> Automatically tilt up from the driver (Standard) = Tilt Only</li> <li><input type="checkbox"/> Automatically move away from the driver = Telescopic Only</li> <li><input type="checkbox"/> Automatically tilt up and move away from the driver = Tilt and Telescopic</li> <li><input type="checkbox"/> Remain in the current position = Off</li> </ul> <p>*If equipped</p>		
<p><b>21. Access System with Electronic Key</b></p> <p>Unlock the doors with:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> Electronic key unlock button (deactivates Smart Access) = Off</li> <li><input type="checkbox"/> Smart Access (touch door handle) or electronic key (Standard) = On</li> </ul>	<hr/>	 Dealer only
<p><b>22. Unlock on Second Key Turn</b></p> <p>When using the mechanical key to unlock the doors:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> Turning the key one time will unlock all doors = Off</li> <li><input type="checkbox"/> Turning the key one time unlocks the driver door, and two times unlocks all doors (Standard) = On</li> </ul>	<hr/>	 Dealer only
<p><b>23. Trunk Link with Door Lock</b></p> <p>When using the electronic key to lock/unlock both doors the trunk can be programmed as follows:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> The trunk will not lock/unlock = Off</li> <li><input type="checkbox"/> The trunk will lock/unlock (Standard) = On</li> </ul>	<hr/>	 Dealer only
<p><b>24. Driver Door Indicator Off Delay</b></p> <p>Time elapsed before driver door indicator turns off:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> 30 seconds (Standard)</li> <li><input type="checkbox"/> 1 minute</li> <li><input type="checkbox"/> 10 minutes</li> <li><input type="checkbox"/> 20 minutes</li> </ul>	<hr/>	 Dealer only
<p><b>25. Passenger Door Indicator Off Delay</b></p> <p>Time elapsed before passenger door indicator turns off:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> 30 seconds (Standard)</li> <li><input type="checkbox"/> 1 minute</li> <li><input type="checkbox"/> 10 minutes</li> <li><input type="checkbox"/> 20 minutes</li> </ul>	<hr/>	 Dealer only
<p><b>26. Panic Mode</b></p> <p>When pressing the panic button on the electronic key:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> The alarm will not sound and the vehicle lights will not flash = Off</li> <li><input type="checkbox"/> The alarm will sound intermittently and the vehicle lights will flash (Standard) = On</li> </ul>	<hr/>	 Dealer only
<p><b>27. Door Lock Buzzer</b></p> <p>When the lock button on the electronic key is pressed and a door is not fully closed:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> The buzzer will not sound = Off</li> <li><input type="checkbox"/> The buzzer will sound (Standard) = On</li> </ul>	<hr/>	 Dealer only
<p><b>28. Wireless Remote Window Operation Buzzer</b></p> <p>When option #32 is on, and the wireless remote is used to open windows:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> The buzzer will not sound = Off</li> <li><input type="checkbox"/> The buzzer will sound (Standard) = On</li> </ul>	<hr/>	 Dealer only

Programmable by Dealer Only (cont'd)	Using the Navigation System	Dealer
<b>29. Opening the Trunk</b> Pressing the trunk release button on the electronic key will open the trunk. The release button can be programmed as follows: <ul style="list-style-type: none"> <li><input type="checkbox"/> Press button one time to release the trunk (No delay)</li> <li><input type="checkbox"/> Press button two times to release the trunk</li> <li><input type="checkbox"/> Press and hold button for 0.8 seconds to release the trunk (Standard)</li> <li><input type="checkbox"/> Press and hold button for 2 seconds to release the trunk</li> <li><input type="checkbox"/> The button can be turned off so the trunk cannot be opened using the electronic key</li> </ul>	_____	 Dealer only
<b>30. Close Windows with Mechanical Key</b> When using the mechanical key to operate windows: <ul style="list-style-type: none"> <li><input type="checkbox"/> Turning the key right and holding the position for 2 seconds will not close the windows (Standard) = Off</li> <li><input type="checkbox"/> Turning the key right and holding the position for 2 seconds will close the windows = On</li> </ul>	_____	 Dealer only
<b>31. Open Windows with Mechanical Key</b> When using the mechanical key to operate windows: <ul style="list-style-type: none"> <li><input type="checkbox"/> Turning the key left and holding the position for 2 seconds will not open the windows (Standard) = Off</li> <li><input type="checkbox"/> Turning the key left and holding the position for 2 seconds will open the windows = On</li> </ul>	_____	 Dealer only
<b>32. Open Windows with Electronic Key</b> When pressing the unlock button on the electronic key for 3 seconds: <ul style="list-style-type: none"> <li><input type="checkbox"/> The windows will not open (Standard) = Off</li> <li><input type="checkbox"/> All the windows will open = On</li> </ul>	_____	 Dealer only
<b>33. Rain-Sensing Windshield Wipers</b> Wiper operation in the Auto position: <ul style="list-style-type: none"> <li><input type="checkbox"/> Rain-Sensing (Standard) = On</li> <li><input type="checkbox"/> Intermittent linked with speed = Off</li> </ul>	_____	 Dealer only
<b>34. Interior Light</b> The interior light will illuminate when Power is switched to Off: <ul style="list-style-type: none"> <li><input type="checkbox"/> Off</li> <li><input type="checkbox"/> On (Standard)</li> </ul>	_____	 Dealer only
<b>35. Illumination of the Interior Cabin Light when Unlocking Door</b> When using the electronic or mechanical key to unlock the door: <ul style="list-style-type: none"> <li><input type="checkbox"/> The cabin light will not illuminate = Off</li> <li><input type="checkbox"/> The cabin light will illuminate (Standard) = On</li> </ul>	_____	 Dealer only
<b>36. Illumination of the Interior Cabin Light when Approaching the Vehicle</b> When approaching the vehicle with the electronic key: <ul style="list-style-type: none"> <li><input type="checkbox"/> The cabin light will not illuminate = Off</li> <li><input type="checkbox"/> The cabin light will illuminate (Standard) = On</li> </ul>	_____	 Dealer only
<b>37. Illumination of the Door Trim Lights when Unlocking Door</b> When unlocking the vehicle with the electronic key: <ul style="list-style-type: none"> <li><input type="checkbox"/> The door trim lights will not illuminate = Off</li> <li><input type="checkbox"/> The door trim lights will illuminate (Standard) = On</li> </ul>	_____	 Dealer only
<b>38. Driver Seat Belt Reminder</b> When the vehicle reaches 12 mph: <ul style="list-style-type: none"> <li><input type="checkbox"/> The driver seat belt reminder will not beep = Off</li> <li><input type="checkbox"/> The driver seat belt reminder will beep (Standard) = On</li> </ul>	_____	 Dealer only
<b>39. Passenger Seat Belt Reminder</b> When the vehicle reaches 12 mph: <ul style="list-style-type: none"> <li><input type="checkbox"/> The passenger seat belt reminder will not beep = Off</li> <li><input type="checkbox"/> The passenger seat belt reminder will beep (Standard) = On</li> </ul>	_____	 Dealer only

Programmable by Dealer Only (cont'd)	Using the Navigation System	Dealer
<b>40. Lane Change Flasher Volume</b> The turn signal volume can be programmed: <input type="checkbox"/> Medium (Standard) <input type="checkbox"/> Soft <input type="checkbox"/> Loud		 Dealer only
<b>41. Lane Change Signal Flashes</b> Push turn signal lever partway to signal a lane change. Signal will flash: <input type="checkbox"/> Off <input type="checkbox"/> 3 times (Standard) <input type="checkbox"/> 4 times <input type="checkbox"/> 5 times <input type="checkbox"/> 6 times <input type="checkbox"/> 7 times		 Dealer only
<b>42. Reverse Beep Alert</b> When the vehicle is shifted into Reverse: <input type="checkbox"/> The alert will beep continuously (Standard) = On <input type="checkbox"/> The alert will beep once = Off		 Dealer only
<b>43. Instrument Dimming Sensitivity</b> Level of light at which the instrument panel lights will dim: 		 Dealer only
<b>44. Instrument Restore Sensitivity</b> Level of light at which the instrument panel lights will brighten: 		 Dealer only
<b>45. Efficient Ventilation Mode</b> When the front defogger is activated: <input type="checkbox"/> It will automatically engage the air conditioner compressor to blow air onto the windshield (Standard) = On <input type="checkbox"/> It will automatically blow air onto the windshield without engaging the air conditioner compressor = Off		 Dealer only
<b>46. Door Handle Retraction Speed</b> Adjust the vehicle speed at which the door handles will automatically retract: <input type="checkbox"/> 3 mph <input type="checkbox"/> 6 mph <input type="checkbox"/> 9 mph (Standard) <input type="checkbox"/> 12 mph		 Dealer only
<b>47. Automatic Mirror Fold and Extend</b> Select when mirrors should fold and extend: <input type="checkbox"/> Fold linked with Power switch <input type="checkbox"/> Fold linked with door lock (Standard) <input type="checkbox"/> Don't fold = Off		 Dealer only
<b>48. Side Mirror Tilting Operation</b> When shifting into Reverse, mirrors will automatically move according to: <input type="checkbox"/> The vehicle's default setting = Off <input type="checkbox"/> The driver's setting = On (Standard)		 Dealer only

Date

Customer Signature

Repair Order Number (Dealer only)

Vehicle Identification Number (Dealer only)