

Lexus Personalized Settings

Your vehicle includes a variety of electronic features that can be programmed to your preferences. The programming of these features is performed once at no charge by your Lexus Dealer provided you obtain the service at the 6-month/5,000-mile scheduled maintenance service.

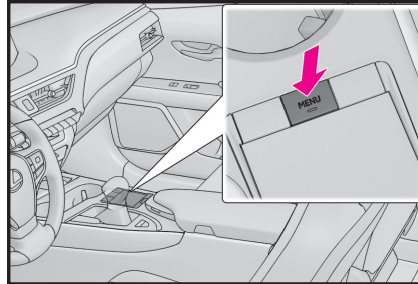 
It is also possible to customize certain vehicle features yourself using the vehicle's display screen.

SERVICE

BY LEXUS

2019 UX 250h

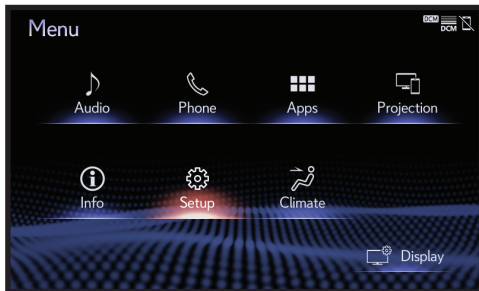 
Vehicle must be in "On" mode to program personalized settings.



STEP 1 Press the **MENU** button.

Please refer to the 2019 Lexus UX 250h Quick Guide or Owner's Manual for detailed information on Remote Touch operations.

Vehicles with Display Audio System:



STEP 2 Highlight "Setup" with the touchpad. Press down to select.

STEP 3 Select Vehicle on the sub menu. Then select "Vehicle Customization."

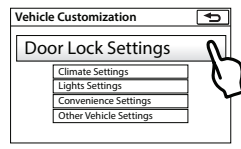 

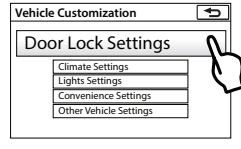 

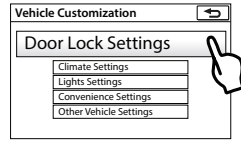 

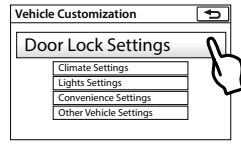 

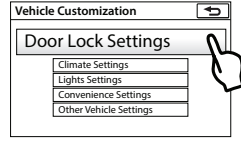 

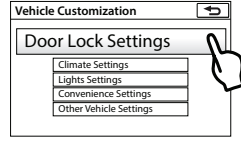 

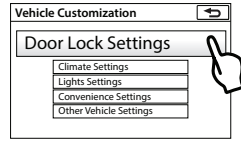 









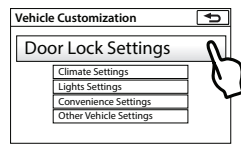 

STEP 4 Select desired categories for customization.

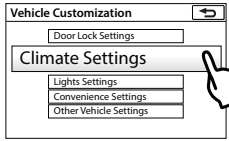 

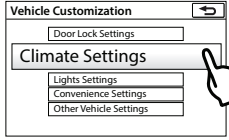 

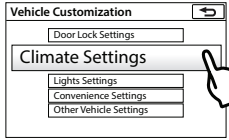 

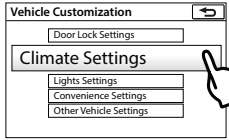 

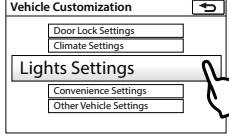 

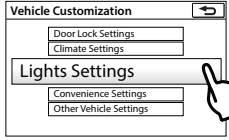 

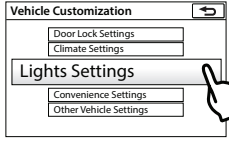 

Vehicles with Navigation System:

STEP 2 Highlight "Setup" with the touchpad. Press down to select.

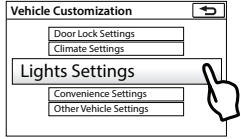 

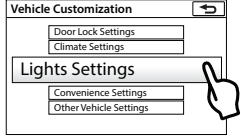 

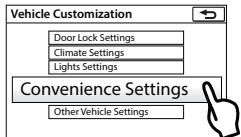 

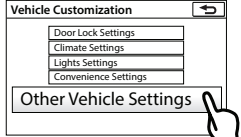 






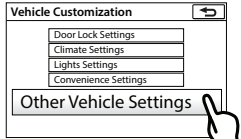 



STEP 3 Select Vehicle on the sub menu. Then select "Vehicle Customization."

STEP 4 Select desired categories for customization.











<h2 style="margin: 0;">Door Lock Settings</h2>	<h3 style="margin: 0;">Using the Navigation System</h3>	<h3 style="margin: 0;">Dealer</h3>
<p>1. Automatic Door Lock The automatic door locks can be programmed as follows:</p> <ul style="list-style-type: none"> <input type="checkbox"/> The doors automatically lock when the vehicle speed is 12 mph or higher = By Speed <input type="checkbox"/> The doors automatically lock when the vehicle is taken out of Park and shifted into another range (Default) = By Shift from P <input type="checkbox"/> The doors will not automatically lock = Off 		
<p>2. Automatic Door Unlock The automatic door locks can be programmed as follows:</p> <ul style="list-style-type: none"> <input type="checkbox"/> The doors automatically unlock when the vehicle is shifted into Park (Default) = By Shift to P <input type="checkbox"/> All the doors automatically unlock when the driver door is opened = By Driver Door <input type="checkbox"/> The doors will not automatically unlock = Off 		
<p>3. Remote 2-Press Unlock When using the electronic key to unlock the doors:</p> <ul style="list-style-type: none"> <input type="checkbox"/> Pressing the unlock button one time unlocks the driver's door and two times unlocks all doors (Default) = On <input type="checkbox"/> Pressing the unlock button one time unlocks all doors = Off 		
<p>4. Wireless Lock When Door Opened Pressing lock button on electronic key will lock doors when they are open:</p> <ul style="list-style-type: none"> <input type="checkbox"/> On (Default) <input type="checkbox"/> Off 		
<p>5. Select Doors to Unlock When using Smart Access to unlock the doors:</p> <ul style="list-style-type: none"> <input type="checkbox"/> Gripping the driver door handle will unlock all doors = All Doors <input type="checkbox"/> Gripping the driver door handle will unlock the driver's door (Default) = Driver's Door 		
<p>6. Auto Re-lock Timer When the doors are unlocked and not opened:</p> <ul style="list-style-type: none"> <input type="checkbox"/> They will automatically re-lock in 120 seconds <input type="checkbox"/> They will automatically re-lock in 60 seconds (Default) <input type="checkbox"/> They will automatically re-lock in 30 seconds <input type="checkbox"/> They will not re-lock = Off 		
<p>7. Lock/Unlock Feedback - Lights When the lock or unlock button on the electronic key is pressed:</p> <ul style="list-style-type: none"> <input type="checkbox"/> Lock button makes lights flash once/Unlock button makes lights flash twice (Default) = On <input type="checkbox"/> Lights will not flash = Off 		
<p>8. Lock/Unlock Feedback - Tone When the lock button is pressed on the electronic key, the system volume can be programmed as follows:</p> <div style="display: flex; justify-content: space-around; align-items: center; margin-top: 10px;"> <div style="text-align: center;"> off</div> <div style="text-align: center;"> volume 1</div> <div style="text-align: center;"> volume 2</div> <div style="text-align: center;"> volume 3</div> <div style="text-align: center;"> volume 4</div> <div style="text-align: center;"> volume 5 (Default)</div> <div style="text-align: center;"> volume 6</div> <div style="text-align: center;"> volume 7</div> </div>		

Climate Settings	Using the Navigation System	Dealer
<p>9. Auto Seat Temperature FR L (Front Left)* Sensitivity level for climate controlled (A/C, heater) driver seat:</p> <p>Very High High Normal (Default) Low Very Low</p>		
<p>10. Auto Seat Temperature FR R (Front Right)* Sensitivity level for climate controlled (A/C, heater) front passenger seat:</p> <p>Very High High Normal (Default) Low Very Low</p>		
<p>11. Auto Heated Steering Wheel Time* Adjust the time when the heated steering wheel automatically turns off:</p> <p>Very Short Short Normal (Default) Long Very Long</p>		
<p>12. Auto A/C Mode When Auto A/C is selected:</p> <ul style="list-style-type: none"> <input type="checkbox"/> It will automatically engage the air conditioner compressor to reach the set temperature (Default) = On <input type="checkbox"/> It will automatically achieve a set temperature, warm or cool, without engaging the air conditioner compressor* = Off <p>*The A/C compressor will be engaged when the Auto A/C button is pressed a second time</p>		
<p>Lights Settings</p> <p>13. Headlights Auto-On Sensitivity The front headlights can be programmed to turn On under varying degrees of ambient light conditions (headlight switch must be in Auto mode):</p> <p>very dark dark normal (Default) light very light</p>		
<p>14. Headlights Auto-Off Timer When the ignition is turned off and all the doors are closed (headlight switch must be in On or Auto mode):</p> <ul style="list-style-type: none"> <input type="checkbox"/> The headlights will turn off in 90 seconds <input type="checkbox"/> The headlights will turn off in 60 seconds <input type="checkbox"/> The headlights will turn off in 30 seconds (Default) <input type="checkbox"/> The headlights will turn off immediately when the vehicle is turned off and the driver door is opened 		
<p>15. Daytime Running Lights Illumination of daytime running lights:</p> <ul style="list-style-type: none"> <input type="checkbox"/> On (Default) <input type="checkbox"/> Off 		










* If equipped

Lights Settings (cont'd)	Using the Navigation System	Dealer
<p>16. Interior Lights Auto-Off Timer The interior lights can be adjusted to stay on after closing the door as follows:</p> <ul style="list-style-type: none"> <input type="checkbox"/> 30 seconds <input type="checkbox"/> 15 seconds (Default) <input type="checkbox"/> 7.5 seconds <input type="checkbox"/> Off 		
<p>17. Exterior Lights Auto-Off Timer The exterior lights can be adjusted to stay on after closing the door as follows:</p> <ul style="list-style-type: none"> <input type="checkbox"/> 30 seconds <input type="checkbox"/> 15 seconds (Default) <input type="checkbox"/> 7.5 seconds <input type="checkbox"/> Off 		
<p>Convenience Services</p> <p>18. Convenience Services (Suggestion Function) Suggestion messages for headlight operation and power window lock displayed on the Multi-Information Display:</p> <ul style="list-style-type: none"> <input type="checkbox"/> On (Default) <input type="checkbox"/> On While Stopped <input type="checkbox"/> Off 		
<p>Other Vehicle Settings</p> <p>19. Steering Column Easy-Exit* (Navigation-equipped vehicles only) When vehicle is shifted into Park and ignition turned off, steering wheel will:</p> <ul style="list-style-type: none"> <input type="checkbox"/> Automatically tilt up from the driver (Default) = Tilt Only <input type="checkbox"/> Automatically move away from the driver = Telescopic Only <input type="checkbox"/> Automatically tilt up and move away from the driver = Tilt and Telescopic <input type="checkbox"/> Remain in the current position = Off 		
<p>20. Power Back Door Opening Adjustment* Adjust the opening of the back door:</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> max (Default)</div> <div style="text-align: center;"> large</div> <div style="text-align: center;"> middle</div> <div style="text-align: center;"> small</div> <div style="text-align: center;"> minimum</div> </div>		
<p>Programmable by Dealer Only</p> <p>21. Power Back Door Switch Operation* The back door opener button can be programmed as follows:</p> <ul style="list-style-type: none"> <input type="checkbox"/> Press button one time to open back door = No Delay <input type="checkbox"/> Press and hold the button for 0.8 seconds to open back door (Default) = Short Delay 	<hr style="width: 100px; margin: auto;"/>	 Dealer only
<p>22. Back Door Chime* The chime that sounds while opening the back door can be programmed as follows:</p> <ul style="list-style-type: none"> <input type="checkbox"/> Start buzzer On; in-operation buzzer Off (Default) <input type="checkbox"/> Start buzzer Off; in-operation buzzer On 	<hr style="width: 100px; margin: auto;"/>	 Dealer only







 

 

* If equipped

<u>Programmable by Dealer Only (cont'd)</u>	Using the Navigation System	Dealer
23. Opening Back Door Using Electronic Key* Pressing the back door opener button on the electronic key will open the back door. <input type="checkbox"/> Press and hold button <input type="checkbox"/> Unlock the back door and then press the button (Default)	_____	 Dealer only
24. Power Back Door Open Assist Operation* Pressing the power back door opener button on the rear door engages the power door function, and the door opens. <input type="checkbox"/> Off <input type="checkbox"/> On (Default)	_____	 Dealer only
25. Power Back Door / Touchless Sensor* The power back door opens when holding a hand over or touching the upper part of the rear emblem: <input type="checkbox"/> Off <input type="checkbox"/> Power back door On; touchless sensor Off <input type="checkbox"/> On (Default)	_____	 Dealer only
26. Back Door Chime Volume* The back door chime volume can be programmed: <input type="checkbox"/> Soft <input type="checkbox"/> Medium <input type="checkbox"/> Loud (Default)	_____	 Dealer only
27. Opening Back Door Using Kick Sensor* Placing foot under the center area of the rear bumper while carrying the electronic key will open the power back door. <input type="checkbox"/> Off <input type="checkbox"/> On (Default)	_____	 Dealer only
28. Access System with Electronic Key Unlock the doors with: <input type="checkbox"/> Electronic key unlock button (deactivates Smart Access) = Off <input type="checkbox"/> Smart Access (touch door handle) or electronic key (Default) = On	_____	 Dealer only
29. Door Lock Buzzer When the lock button on the electronic key is pressed and a door is not fully closed: <input type="checkbox"/> The buzzer will not sound = Off <input type="checkbox"/> The buzzer will sound (Default) = On	_____	 Dealer only
30. Panic Mode When pressing the panic button on the electronic key: <input type="checkbox"/> The alarm will not sound and the vehicle lights will not flash = Off <input type="checkbox"/> The alarm will sound intermittently and the vehicle lights will flash (Default) = On	_____	 Dealer only
31. Wireless Remote Window Operation Buzzer When option #36 is on, and the wireless remote is used to open windows: <input type="checkbox"/> The buzzer will not sound = Off <input type="checkbox"/> The buzzer will sound (Default) = On	_____	 Dealer only
32. Unlock on Second Key Turn When using the mechanical key to unlock the doors: <input type="checkbox"/> Turning the key one time will unlock all doors = Off <input type="checkbox"/> Turning the key one time unlocks the driver door, and two times unlocks all doors (Default) = On	_____	 Dealer only

* If equipped



<u>Programmable by Dealer Only (cont'd)</u>	Using the Navigation System	Dealer
33. Open Window Buzzer When the lock button on the electronic key is pressed and a window is not fully closed: <input type="checkbox"/> The buzzer will not sound = Off <input type="checkbox"/> The buzzer will sound (Default) = On	_____	 Dealer only
34. Open Moon Roof Buzzer* When the lock button on the electronic key is pressed and the moon roof is not fully closed: <input type="checkbox"/> The buzzer will not sound = Off <input type="checkbox"/> The buzzer will sound (Default) = On	_____	 Dealer only
35. Close Windows and Moon Roof* with Mechanical Key When using the mechanical key to operate windows and moon roof: <input type="checkbox"/> Turning the key right and holding the position for 2 seconds will not close the windows and moon roof (Default) = Off <input type="checkbox"/> Turning the key right and holding the position for 2 seconds will close the windows and moon roof = On	_____	 Dealer only
36. Open Windows and Moon Roof* with Mechanical Key When using the mechanical key to operate windows and moon roof: <input type="checkbox"/> Turning the key left and holding the position for 2 seconds will not open the windows and moon roof (Default) = Off <input type="checkbox"/> Turning the key left and holding the position for 2 seconds will open the windows and moon roof = On	_____	 Dealer only
37. Open Windows and Moon Roof* with Electronic Key When pressing the unlock button on the electronic key for 3 seconds: <input type="checkbox"/> The windows and moon roof will not open (Default) = Off <input type="checkbox"/> All the windows and moon roof will open = On	_____	 Dealer only
38. Moon Roof Switch* - Auto Operation Pressing the open/close switch will automatically open or close the moon roof in one motion: <input type="checkbox"/> Off <input type="checkbox"/> On (Default)	_____	 Dealer only
39. Interior Light The interior light will illuminate when Power is switched to Off: <input type="checkbox"/> Off <input type="checkbox"/> On (Default)	_____	 Dealer only
40. Illumination of the Interior Cabin Light when Unlocking Door When using the electronic or mechanical key to unlock the door: <input type="checkbox"/> The cabin light will not illuminate = Off <input type="checkbox"/> The cabin light will illuminate (Default) = On	_____	 Dealer only
41. Illumination of the Interior Cabin Light when Approaching the Vehicle When approaching the vehicle with the electronic key: <input type="checkbox"/> The cabin light will not illuminate = Off <input type="checkbox"/> The cabin light will illuminate (Default) = On	_____	 Dealer only

* If equipped

<u>Programmable by Dealer Only (cont'd)</u>	Using the Navigation System	Dealer
42. Illumination of the Outer Foot Lights when Approaching the Vehicle When approaching the vehicle with the electronic key: <input type="checkbox"/> The outer foot lights will not illuminate = Off <input type="checkbox"/> The outer foot lights will illuminate (Default) = On	_____	 Dealer only
43. Illumination of the Outer Foot Lights when Unlocking Door When unlocking the vehicle with the electronic key: <input type="checkbox"/> The outer foot lights will not illuminate = Off <input type="checkbox"/> The outer foot lights will illuminate (Default) = On	_____	 Dealer only
44. Driver Seat Belt Reminder When the vehicle reaches 12 mph: <input type="checkbox"/> The driver seat belt reminder will not beep = Off <input type="checkbox"/> The driver seat belt reminder will beep (Default) = On	_____	 Dealer only
45. Front Passenger Seat Belt Reminder When the vehicle reaches 12 mph: <input type="checkbox"/> The passenger seat belt reminder will not beep = Off <input type="checkbox"/> The passenger seat belt reminder will beep (Default) = On	_____	 Dealer only
46. Lane Change Flasher Volume The turn signal volume can be programmed: <input type="checkbox"/> Medium (Default) <input type="checkbox"/> Soft <input type="checkbox"/> Loud	_____	 Dealer only
47. Lane Change Signal Flashes Push the turn signal lever partway to signal a lane change. It will flash: <input type="checkbox"/> Off <input type="checkbox"/> 3 times (Default) <input type="checkbox"/> 4 times <input type="checkbox"/> 5 times <input type="checkbox"/> 6 times <input type="checkbox"/> 7 times	_____	 Dealer only
48. Instrument Dimming Sensitivity Level of light at which the instrument panel lights will dim: 	_____	 Dealer only
49. Instrument Restore Sensitivity Level of light at which the instrument panel lights will brighten: 	_____	 Dealer only

* If equipped

Settings that can be customized by:

<u>Programmable by Dealer Only (cont'd)</u>	Using the Navigation System	Dealer
<p>50. Efficient Ventilation Mode When the front defogger is activated:</p> <ul style="list-style-type: none"> <input type="checkbox"/> It will automatically engage the air conditioner compressor to blow air onto the windshield (Default) = On <input type="checkbox"/> It will automatically blow air onto the windshield without engaging the air conditioner compressor = Off 	_____	 Dealer only
<p>51. Automatic Mirror Fold and Extend* Select when mirrors should fold and extend:</p> <ul style="list-style-type: none"> <input type="checkbox"/> Fold linked with Power switch <input type="checkbox"/> Fold linked with door lock (Default) <input type="checkbox"/> Don't fold = Off 	_____	 Dealer only

* If equipped

Date

Customer Signature

Repair Order Number (Dealer only)

Vehicle Identification Number (Dealer only)