

# Lexus Personalized Settings




# LS 500


Your vehicle includes a variety of electronic features that can be programmed to your preferences. The programming of these features is performed once at no charge by your Lexus Dealer provided you obtain the service at the 6-month/5,000-mile scheduled maintenance service.

It is also possible to customize certain vehicle features yourself using the navigation system screen.

 
## Vehicles with Navigation System:

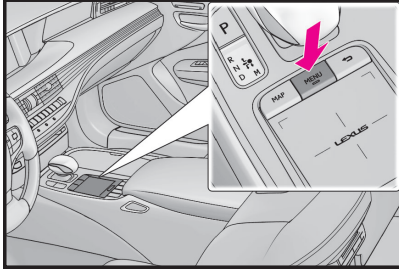

**STEP 1** Press the **MENU** button.

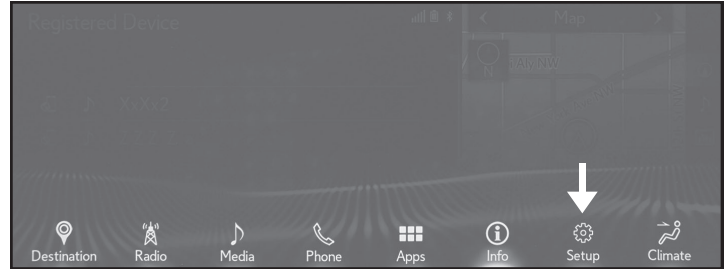

**STEP 2** Highlight "Setup" with the touchpad. Press down to select.

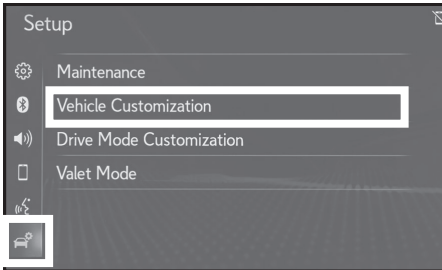



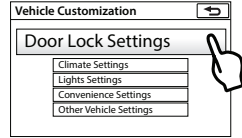

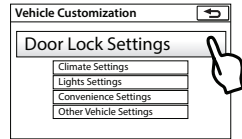

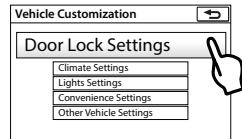

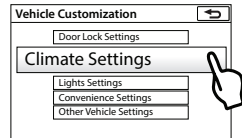

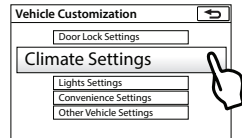

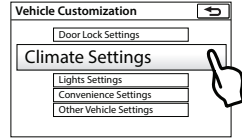

**STEP 3** Select Vehicle on the sub menu.

**STEP 4** Scroll to "Vehicle Customization" and press touchpad to select. Then select desired categories for customization.



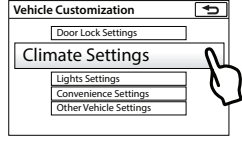

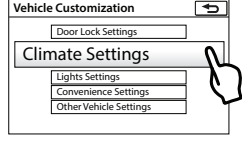

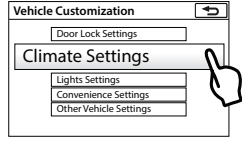

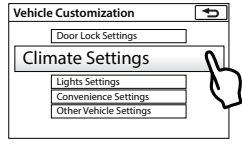

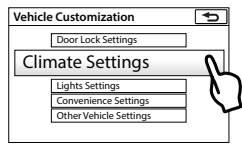

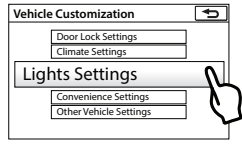

Vehicle must be in "On" mode to program personalized settings.

Please refer to the 2018 LS 500 Quick Guide or Navigation Owner's Manual for more information on Remote Touch operations.

 

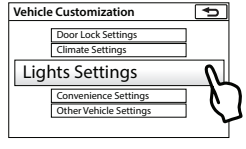 

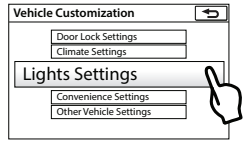 

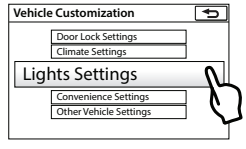 

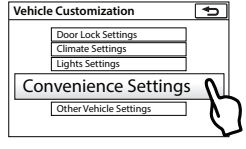 

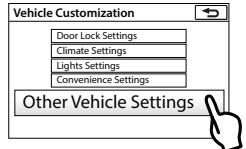 

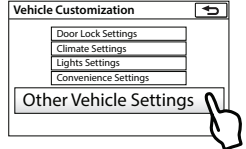 

	Settings that can be customized by:	
	Using the Navigation System	Dealer
<h3>Door Lock Settings</h3> <p><b>1. Automatic Door Lock</b> The automatic door locks can be programmed as follows:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> The doors automatically lock when the vehicle speed is 12 mph or higher = By Speed</li> <li><input type="checkbox"/> The doors automatically lock when the vehicle is taken out of Park and shifted into another range (Standard) = By Shift from P</li> <li><input type="checkbox"/> The doors will not automatically lock = Off</li> </ul>		
<p><b>2. Automatic Door Unlock</b> The automatic door locks can be programmed as follows:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> The doors automatically unlock when the vehicle is shifted into Park (Standard) = By Shift to P</li> <li><input type="checkbox"/> All the doors automatically unlock when the driver door is opened = By Driver Door</li> <li><input type="checkbox"/> The doors will not automatically unlock = Off</li> </ul>		
<p><b>3. Remote 2-Press Unlock</b> When using the electronic key to unlock the doors:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> Pressing the unlock button one time unlocks the driver's door and two times unlocks all doors (Standard) = On</li> <li><input type="checkbox"/> Pressing the unlock button one time unlocks all doors = Off</li> </ul>		
<p><b>4. Wireless Lock When Door Opened</b> Pressing lock button on electronic key will lock doors when they are open:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> On (Standard)</li> <li><input type="checkbox"/> Off</li> </ul>		

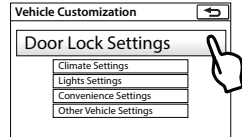 




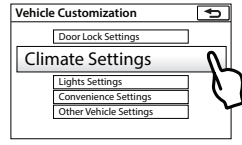

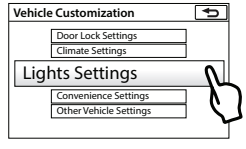


<u>Door Lock Settings (cont'd)</u>	Using the Navigation System	Dealer
<p><b>5. Select Doors to Unlock</b>                      When using Smart Access to unlock the doors:  <input type="checkbox"/> Gripping the driver door handle will unlock all doors = All Doors  <input type="checkbox"/> Gripping the driver door handle will unlock the driver's door (Standard) = Driver's Door</p>		
<p><b>6. Auto Re-lock Timer</b>                      When the doors are unlocked and not opened:  <input type="checkbox"/> They will automatically re-lock in 120 seconds  <input type="checkbox"/> They will automatically re-lock in 60 seconds (Standard)  <input type="checkbox"/> They will automatically re-lock in 30 seconds  <input type="checkbox"/> They will not re-lock = Off</p>		
<p><b>7. Lock/Unlock Feedback - Lights</b>                      When the lock or unlock button on the electronic key is pressed:  <input type="checkbox"/> Lock button makes lights flash once/Unlock button makes lights flash twice (Standard) = On  <input type="checkbox"/> Lights will not flash = Off</p>		
<p><b>8. Lock/Unlock Feedback - Tone</b>                      When the lock button is pressed on the electronic key, the system volume can be programmed as follows:</p> <p> <input type="checkbox"/> off                       <input type="checkbox"/> volume 1                       <input type="checkbox"/> volume 2                       <input type="checkbox"/> volume 3                       <input type="checkbox"/> volume 4                       <input type="checkbox"/> volume 5 (Standard)                       <input type="checkbox"/> volume 6                       <input type="checkbox"/> volume 7                 </p>		
<p><b><u>Climate Settings</u></b></p>		
<p><b>9. Auto Seat Temperature FR L (Front Left)</b>                      Sensitivity level for climate controlled (A/C, heater) driver seat:</p> <p> <input type="checkbox"/> Very High                       <input type="checkbox"/> High                       <input type="checkbox"/> Normal (Standard)                       <input type="checkbox"/> Low                       <input type="checkbox"/> Very Low                 </p>		
<p><b>10. Auto Seat Temperature FR R (Front Right)</b>                      Sensitivity level for climate controlled (A/C, heater) front passenger seat:</p> <p> <input type="checkbox"/> Very High                       <input type="checkbox"/> High                       <input type="checkbox"/> Normal (Standard)                       <input type="checkbox"/> Low                       <input type="checkbox"/> Very Low                 </p>		
<p><b>11. Auto Seat Temperature RR L (Rear Left)*</b>                      Sensitivity level for climate controlled (A/C, heater) driver seat:</p> <p> <input type="checkbox"/> Very High                       <input type="checkbox"/> High                       <input type="checkbox"/> Normal (Standard)                       <input type="checkbox"/> Low                       <input type="checkbox"/> Very Low                 </p>		

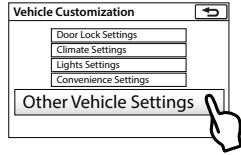









\* If equipped

Climate Settings (cont'd)	Using the Navigation System	Dealer
<p><b>12. Auto Seat Temperature RR R (Rear Right)*</b> Sensitivity level for climate controlled (A/C, heater) driver seat:</p> <p>Very High   High   Normal (Standard)   Low   Very Low</p>		
<p><b>13. Auto Seat Heater Default RR L (Rear Left)*</b> Rear seat heater/ventilator is automatically activated when engine is turned On:</p> <p><input type="checkbox"/> Off (Standard) <input type="checkbox"/> On</p>		
<p><b>14. Auto Seat Heater Default RR R (Rear Right)*</b> Rear seat heater/ventilator is automatically activated when engine is turned On:</p> <p><input type="checkbox"/> Off (Standard) <input type="checkbox"/> On</p>		
<p><b>15. Auto Heated Steering Wheel Time*</b> Adjust the time when the heated steering wheel automatically turns off:</p> <p>Very Short   Short   Normal (Standard)   Long   Very Long</p>		
<p><b>16. Smog Sensor Sensitivity</b> When in Auto recirculated air mode, the sensor will determine when to switch from outside air to recirculated air based on outside air quality:</p> <p>lowest sensitivity   sensitivity 2   sensitivity 3   normal (Standard)   sensitivity 5   sensitivity 6   highest sensitivity</p>		
<p><b>17. Auto A/C Mode</b> When Auto A/C is selected:</p> <p><input type="checkbox"/> It will automatically engage the air conditioner compressor to reach the set temperature (Standard) = On <input type="checkbox"/> It will automatically achieve a set temperature, warm or cool, without engaging the air conditioner compressor* = Off</p> <p>*The A/C compressor will be engaged when the Auto A/C button is pressed a second time</p>		
<p><b>Lights Settings</b></p>		
<p><b>18. Headlights Auto-On Sensitivity</b> The front headlights can be programmed to turn On under varying degrees of ambient light conditions (headlight switch must be in Auto mode):</p> <p>very dark   dark   normal (Standard)   light   very light</p>		















\* If equipped










Lights Settings (cont'd)	Using the Navigation System	Dealer
<p><b>19. Headlights Auto-Off Timer</b> When the ignition is turned off and all the doors are closed (headlight switch must be in On or Auto mode):</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> The headlights will turn off in 90 seconds</li> <li><input type="checkbox"/> The headlights will turn off in 60 seconds</li> <li><input type="checkbox"/> The headlights will turn off in 30 seconds (Standard)</li> <li><input type="checkbox"/> The headlights will turn off immediately when the vehicle is turned off and the driver door is opened</li> </ul>		
<p><b>20. Daytime Running Lights</b> Illumination of daytime running lights:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> On (Standard)</li> <li><input type="checkbox"/> Off</li> </ul>		
<p><b>21. Interior Lights Auto-Off Timer</b> The interior lights can be adjusted to stay on after closing the door as follows:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> 30 seconds</li> <li><input type="checkbox"/> 15 seconds (Standard)</li> <li><input type="checkbox"/> 7.5 seconds</li> <li><input type="checkbox"/> Off</li> </ul>		
<p><b>22. Exterior Lights Auto-Off Timer</b> The exterior lights can be adjusted to stay on after closing the door as follows:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> 30 seconds</li> <li><input type="checkbox"/> 15 seconds (Standard)</li> <li><input type="checkbox"/> 7.5 seconds</li> <li><input type="checkbox"/> Off</li> </ul>		
<p><b>Convenience Services</b></p> <p><b>23. Convenience Services (Suggestion Function)</b> Suggestion messages for headlight operation and power window lock displayed on the Multi-Information Display:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> On (Standard)</li> <li><input type="checkbox"/> On While Stopped</li> <li><input type="checkbox"/> Off</li> </ul>		
<p><b>Other Vehicle Settings</b></p> <p><b>24. Driver's Seat Easy-Exit Slide</b> When the vehicle is placed in Park and the ignition turned Off, the driver seat will:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> Automatically move fully away from the steering wheel (Standard) = Full</li> <li><input type="checkbox"/> Automatically move partially away from the steering wheel = Partial</li> <li><input type="checkbox"/> Remain in the current position, as set by the driver = Off</li> </ul>		
<p><b>25. Driver's Seat Easy-Exit Lift</b> When the vehicle is placed in Park and the ignition turned Off, the driver seat will:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> Automatically fully lower = Full</li> <li><input type="checkbox"/> Automatically partially lower = Partial</li> <li><input type="checkbox"/> Remain in the current position (Standard) = Off</li> </ul>		

<u>Other Vehicle Settings (cont'd)</u>	Using the Navigation System	Dealer
<p><b>26. Steering Column Easy-Exit</b> When vehicle is shifted into Park and ignition turned off, steering wheel will:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> Automatically tilt up from the driver (Standard) = Tilt Only</li> <li><input type="checkbox"/> Automatically move away from the driver = Telescopic Only</li> <li><input type="checkbox"/> Automatically tilt up and move away from the driver = Tilt and Telescopic</li> <li><input type="checkbox"/> Remain in the current position = Off</li> </ul>		
<p><b>Programmable by Dealer Only</b></p> <p><b>27. Trunk Link with Door Lock</b> When using the electronic key to lock/unlock both doors:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> The trunk will not lock/unlock = Off</li> <li><input type="checkbox"/> The trunk will lock/unlock (Standard) = On</li> </ul>	<hr/>	 Dealer only
<p><b>28. Unlock on Second Key Turn</b> When using the mechanical key to unlock the doors:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> Turning the key one time will unlock all doors = Off</li> <li><input type="checkbox"/> Turning the key one time unlocks the driver door, and two times unlocks all doors (Standard) = On</li> </ul>	<hr/>	 Dealer only
<p><b>29. Access System with Electronic Key</b> Unlock the doors with:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> Electronic key unlock button (deactivates Smart Access) = Off</li> <li><input type="checkbox"/> Smart Access (touch door handle) or electronic key (Standard) = On</li> </ul>	<hr/>	 Dealer only
<p><b>30. Door Lock Buzzer</b> When the lock button on the electronic key is pressed and a door is not fully closed:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> The buzzer will not sound = Off</li> <li><input type="checkbox"/> The buzzer will sound (Standard) = On</li> </ul>	<hr/>	 Dealer only
<p><b>31. Panic Mode</b> When pressing the panic button on the electronic key:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> The alarm will not sound and the vehicle lights will not flash = Off</li> <li><input type="checkbox"/> The alarm will sound intermittently and the vehicle lights will flash (Standard) = On</li> </ul>	<hr/>	 Dealer only
<p><b>32. Opening the Trunk</b> Pressing the trunk release button on the electronic key will open the trunk. The release button can be programmed as follows:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> Press button one time to release the trunk (No delay)</li> <li><input type="checkbox"/> Press button two times to release the trunk</li> <li><input type="checkbox"/> Press and hold button for 0.8 seconds to release the trunk (Standard)</li> <li><input type="checkbox"/> Press and hold button for 2 seconds to release the trunk</li> <li><input type="checkbox"/> The button can be turned off so the trunk cannot be opened using the electronic key</li> </ul>	<hr/>	 Dealer only
<p><b>33. Wireless Remote Window Operation Buzzer</b> When option #38 is on, and the wireless remote is used to open windows:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> The buzzer will not sound = Off</li> <li><input type="checkbox"/> The buzzer will sound (Standard) = On</li> </ul>	<hr/>	 Dealer only
<p><b>34. Open Window Buzzer</b> When the lock button on the electronic key is pressed and a window is not fully closed:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> The buzzer will not sound = Off</li> <li><input type="checkbox"/> The buzzer will sound (Standard) = On</li> </ul>	<hr/>	 Dealer only

<u>Programmable by Dealer Only (cont'd)</u>	Using the Navigation System	Dealer
<b>35. Open Moon Roof Buzzer*</b> When the lock button on the electronic key is pressed and the moon roof is not fully closed: <input type="checkbox"/> The buzzer will not sound = Off <input type="checkbox"/> The buzzer will sound (Standard) = On	_____	 Dealer only
<b>36. Close Windows and Moon Roof* with Mechanical Key</b> When using the mechanical key to operate windows and moon roof: <input type="checkbox"/> Turning the key right and holding the position for 2 seconds will not close the windows and moon roof (Standard) = Off <input type="checkbox"/> Turning the key right and holding the position for 2 seconds will close the windows and moon roof = On	_____	 Dealer only
<b>37. Open Windows and Moon Roof* with Mechanical Key</b> When using the mechanical key to operate windows and moon roof: <input type="checkbox"/> Turning the key left and holding the position for 2 seconds will not open the windows and moon roof (Standard) = Off <input type="checkbox"/> Turning the key left and holding the position for 2 seconds will open the windows and moon roof = On	_____	 Dealer only
<b>38. Open Windows and Moon Roof* with Electronic Key</b> When pressing the unlock button on the electronic key for 3 seconds: <input type="checkbox"/> The windows and moon roof will not open (Standard) = Off <input type="checkbox"/> All the windows and moon roof will open = On	_____	 Dealer only
<b>39. Moon Roof Switch - Auto Operation*</b> Pressing the open/close switch will automatically open or close the moon roof in one motion: <input type="checkbox"/> Off <input type="checkbox"/> On (Standard)	_____	 Dealer only
<b>40. Interior Light</b> The interior light will illuminate when Power is switched to Off: <input type="checkbox"/> Off <input type="checkbox"/> On (Standard)	_____	 Dealer only
<b>41. Illumination of the Interior Cabin Light when Unlocking Door</b> When using the electronic or mechanical key to unlock the door: <input type="checkbox"/> The cabin light will not illuminate = Off <input type="checkbox"/> The cabin light will illuminate (Standard) = On	_____	 Dealer only
<b>42. Illumination of the Interior Cabin Light when Approaching the Vehicle</b> When approaching the vehicle with the electronic key: <input type="checkbox"/> The cabin light will not illuminate = Off <input type="checkbox"/> The cabin light will illuminate (Standard) = On	_____	 Dealer only
<b>43. Illumination of the Outer Foot Lights when Approaching the Vehicle</b> When approaching the vehicle with the electronic key: <input type="checkbox"/> The outer foot lights will not illuminate = Off <input type="checkbox"/> The outer foot lights will illuminate (Standard) = On	_____	 Dealer only
<b>44. Illumination of the Outer Foot Lights when Unlocking Door</b> When unlocking the vehicle with the electronic key: <input type="checkbox"/> The outer foot lights will not illuminate = Off <input type="checkbox"/> The outer foot lights will illuminate (Standard) = On	_____	 Dealer only

\* If equipped



<u>Programmable by Dealer Only (cont'd)</u>	Using the Navigation System	Dealer
<b>45. Driver Seat Belt Reminder</b> When the vehicle reaches 12 mph: <input type="checkbox"/> The driver seat belt reminder will not beep = Off <input type="checkbox"/> The driver seat belt reminder will beep (Standard) = On	<hr style="width: 50%; margin: auto;"/>	 Dealer only
<b>46. Front Passenger Seat Belt Reminder</b> When the vehicle reaches 12 mph: <input type="checkbox"/> The passenger seat belt reminder will not beep = Off <input type="checkbox"/> The passenger seat belt reminder will beep (Standard) = On	<hr style="width: 50%; margin: auto;"/>	 Dealer only
<b>47. Rear Right Passenger Seat Belt Reminder</b> When the vehicle reaches 12 mph: <input type="checkbox"/> The passenger seat belt reminder will not beep = Off <input type="checkbox"/> The passenger seat belt reminder will beep (Standard) = On	<hr style="width: 50%; margin: auto;"/>	 Dealer only
<b>48. Rear Left Passenger Seat Belt Reminder</b> When the vehicle reaches 12 mph: <input type="checkbox"/> The passenger seat belt reminder will not beep = Off <input type="checkbox"/> The passenger seat belt reminder will beep (Standard) = On	<hr style="width: 50%; margin: auto;"/>	 Dealer only
<b>49. Rear Center Seat Belt Reminder</b> When the vehicle reaches 12 mph: <input type="checkbox"/> The passenger seat belt reminder will not beep = Off <input type="checkbox"/> The passenger seat belt reminder will beep (Standard) = On	<hr style="width: 50%; margin: auto;"/>	 Dealer only
<b>50. Lane Change Signal Flashes</b> When the turn signal lever is pushed partway to signal a lane change, the signal will flash: <input type="checkbox"/> Off <input type="checkbox"/> 3 times (Standard) <input type="checkbox"/> 4 times <input type="checkbox"/> 5 times <input type="checkbox"/> 6 times <input type="checkbox"/> 7 times	<hr style="width: 50%; margin: auto;"/>	 Dealer only
<b>51. Lane Change Flasher Volume</b> The turn signal volume can be programmed: <input type="checkbox"/> Loud <input type="checkbox"/> Medium (Standard) <input type="checkbox"/> Soft	<hr style="width: 50%; margin: auto;"/>	 Dealer only
<b>52. Reverse Beep Alert</b> When the vehicle is shifted into Reverse: <input type="checkbox"/> The alert will beep continuously (Standard) = Continuous <input type="checkbox"/> The alert will beep once = Once	<hr style="width: 50%; margin: auto;"/>	 Dealer only
<b>53. Instrument Dimming Sensitivity</b> Level of light at which the instrument panel lights will dim: <div style="display: flex; justify-content: space-around; align-items: center; margin-top: 10px;"> <div style="text-align: center;">               very dark           </div> <div style="text-align: center;">               dark           </div> <div style="text-align: center;">               normal (Standard)           </div> <div style="text-align: center;">               light           </div> <div style="text-align: center;">               very light           </div> </div>	<hr style="width: 50%; margin: auto;"/>	 Dealer only

Programmable by Dealer Only (cont'd)	Using the Navigation System	Dealer
<p><b>54. Instrument Restore Sensitivity</b> Level of light at which the instrument panel lights will brighten:</p> <p> <input type="radio"/> very light    <input type="radio"/> light    <input type="radio"/> normal (Standard)    <input type="radio"/> dark    <input type="radio"/> very dark </p>	_____	 Dealer only
<p><b>55. Headlight Illumination Linked to Windshield Wiper</b> If wipers are used in daylight with headlight switch in Auto mode, the headlights will turn on automatically:</p> <p> <input type="checkbox"/> Off  <input type="checkbox"/> On (Standard) </p>	_____	 Dealer only
<p><b>56. Efficient Ventilation Mode</b> When the front defogger is activated:</p> <p> <input type="checkbox"/> It will automatically engage the air conditioner compressor to blow air onto the windshield (Standard) = On  <input type="checkbox"/> It will automatically blow air onto the windshield without engaging the air conditioner compressor = Off </p>	_____	 Dealer only
<p><b>57. Linking Seat Position Memory with Door Unlock</b> When Smart Access is used to unlock the doors, seat position memory recall will function as follows:</p> <p> <input type="checkbox"/> The driver seat will move to memory position when the driver door is unlocked (Standard) = Driver's Door  <input type="checkbox"/> The driver seat will move to memory position when any door is unlocked = Any Door </p>	_____	 Dealer only
<p><b>58. Time Lapse Before Unlocking Doors</b> The time lapse between locking a door, and being able to unlock it by gripping the driver's door handle:</p> <p> <input type="checkbox"/> Off  <input type="checkbox"/> 1.5 seconds  <input type="checkbox"/> 2 seconds (Standard)  <input type="checkbox"/> 2.5 seconds </p>	_____	 Dealer only
<p><b>59. Opening Trunk Using Kick Sensor*</b> Placing foot under the center area of the rear bumper while carrying the electronic key will open the trunk:</p> <p> <input type="checkbox"/> Off  <input type="checkbox"/> On (Standard) </p>	_____	 Dealer only
<p><b>60. Driver's Seat Massage</b> The intensity of the front seat massage system can be adjusted to:</p> <p> <input type="checkbox"/> Light pressure (Standard)  <input type="checkbox"/> Stronger pressure </p>	_____	 Dealer only
<p><b>61. Passenger's Seat Massage</b> The intensity of the front seat massage system can be adjusted to:</p> <p> <input type="checkbox"/> Light pressure (Standard)  <input type="checkbox"/> Stronger pressure </p>	_____	 Dealer only
<p><b>62. Automatic Rear Sunshade*</b> The rear sunshade automatically lowers when shift lever is shifted into Reverse:</p> <p> <input type="checkbox"/> Off  <input type="checkbox"/> On (Standard) </p>	_____	 Dealer only

\* If equipped



Settings that can be customized by:

<u>Programmable by Dealer Only (cont'd)</u>	Using the Navigation System	Dealer
<p><b>63. Rear Sunshade Reverse Timer*</b></p> <p>When option #62 is on, the rear sunshade will automatically lower in:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> 0.7 seconds (Standard)</li> <li><input type="checkbox"/> 1.2 seconds</li> <li><input type="checkbox"/> 0.9 seconds</li> <li><input type="checkbox"/> 0 seconds</li> </ul>	<p>_____</p>	 Dealer only
<p><b>64. Automatic Mirror Fold and Extend</b></p> <p>Select when mirrors should fold and extend:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> Fold linked with Power switch</li> <li><input type="checkbox"/> Fold linked with door lock (Standard)</li> <li><input type="checkbox"/> Don't fold = Off</li> </ul>	<p>_____</p>	 Dealer only

\* If equipped

\_\_\_\_\_

Date

\_\_\_\_\_

Customer Signature

\_\_\_\_\_

Repair Order Number (Dealer only)

\_\_\_\_\_

Vehicle Identification Number (Dealer only)