Lexus Personalized Settings

Your vehicle includes a variety of electronic features that can be programmed to your preferences. Programming of these features is performed once at no charge by your Lexus Dealer provided you obtain the service at the 6-month/5,000-mile scheduled maintenance service.

It is also possible to customize certain vehicle features yourself using the navigation system screen.

LEXUS

RX 450h

Vehicles with Navigation system:

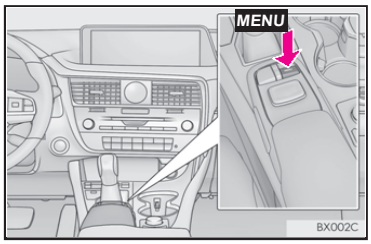

STEP 1 Press the MENU button.

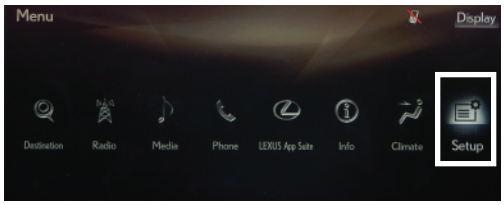

STEP 2 Highlight Setup using the Remote Touch, then push knob to select.

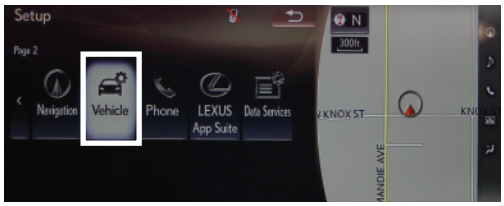

STEP 3 Scroll to Page 2. Highlight Vehicle then push knob to select.

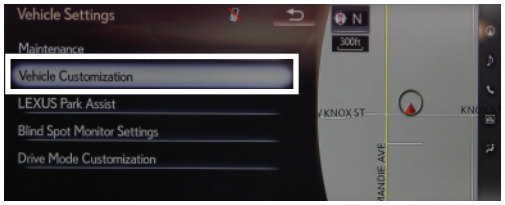

STEP 4 Highlight Vehicle Customization then push knob to select.

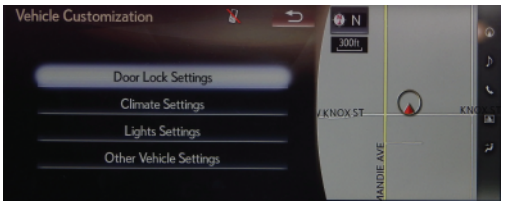

STEP 5 Select category and scroll to specific customization setting.

Vehicle must be in "**ON**" mode to program personalized settings.

Please refer to the 2016 RX 450h Quick Guide or Navigation Owner's Manual for more information on Remote Touch operations.

Door Lock Settings	Settings that can be customized by: Using the navigation system	Dealer
1. Automatic Door Lock The automatic door locks can be programmed as follows: ☐ The doors automatically lock when the vehicle speed is 12 mph or higher = By speed ☐ The doors automatically lock when the vehicle is taken out of Park and shifted into another range (Standard) = By shift from P ☐ The doors will not automatically lock = Off	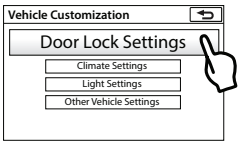	
2. Automatic Door Unlock The automatic door locks can be programmed as follows: ☐ The doors automatically unlock when the vehicle is shifted into Park (Standard) = By shift to P ☐ All the doors automatically unlock when the driver door is opened = By driver door ☐ The doors will not automatically unlock = Off	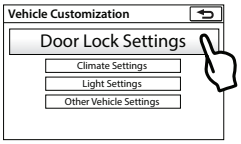	
3. Remote 2-Press Unlock When using the electronic key to unlock the doors: ☐ Pressing the unlock button one time unlocks the driver's door and two times unlocks all doors (Standard) = On ☐ Pressing the unlock button one time unlocks all doors = Off	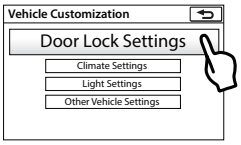	
4. Wireless Lock When Door Opened Pressing lock button on electronic key will lock doors when they are open: ☐ Off ☐ On (Standard)	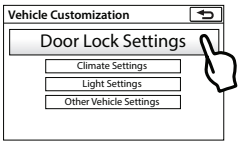	

LPS options were correct at time of development. All options are subject to change without prior notice.

Door Lock Settings (cont'd)	Settings that can be customized by: Using the navigation system	Dealer
5. Select Doors to Unlock When using Smart Access to unlock the doors: ☐ Gripping the driver door handle will unlock all doors = All doors ☐ Gripping the driver door handle will unlock the driver's door (Standard) = Driver's door	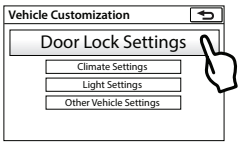	
6. Auto Re-lock Timer When the doors are unlocked and not opened: ☐ They will automatically re-lock in 120 seconds ☐ They will automatically re-lock in 60 seconds (Standard) ☐ They will automatically re-lock in 30 seconds ☐ They will not re-lock = Off	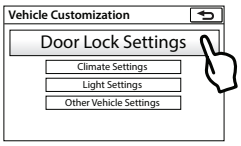	
7. Lock/Unlock Feedback - Lights When the lock or unlock button on the electronic key is pressed: ☐ Lock button makes lights flash once/Unlock button makes lights flash twice (Standard) = On ☐ Lights will not flash = Off	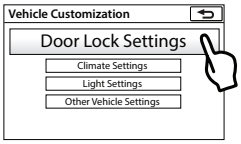	
8. Lock/Unlock Feedback - Tone When the lock button is pressed on the electronic key, the system volume can be programmed as follows: off · volume 1 · volume 2 · volume 3 · volume 4 · volume 5 (standard) · volume 6 · volume 7	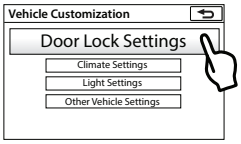	
Climate Settings **9. Auto Seat Temperature FR L (Front Left)** Sensitivity level for climate controlled (AC, heater) driver seat: Very High · High · Normal (Standard) · Low · Very Low	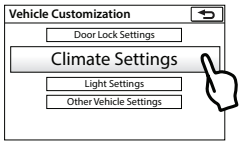	
10. Auto Seat Temp. FR R (Front Right) Sensitivity level for climate controlled (AC, heater) front passenger seat: Very High · High · Normal (Standard) · Low · Very Low	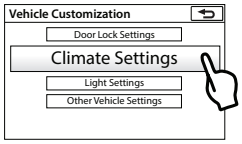	
11. Smog Sensor Sensitivity When in AUTO recirculation mode, the sensor will determine when to switch from outside air to recirculated air based on outside air quality: lowest sensitivity · sensitivity 2 · sensitivity 3 · normal (standard) · sensitivity 5 · sensitivity 6 · highest sensitivity	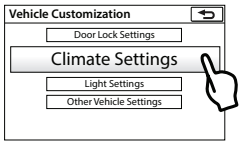	
12. Auto A/C Mode When Auto A/C is selected: ☐ It will automatically engage the air conditioner compressor to reach the set temperature (Standard) = On ☐ It will automatically achieve a set temperature, warm or cool, without engaging the air conditioner compressor* = Off *The AC compressor will be engaged when the Auto AC button is pressed a second time	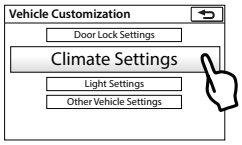	

	Settings that can be customized by:	
	Using the navigation system	Dealer
Lights Settings		
13. Headlamps-On Sensitivity The front headlights can be programmed to turn On under varying degrees of ambient light conditions (headlight switch must be in AUTO mode): very dark · dark · normal (standard) · light · very light	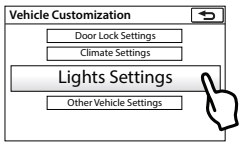	
14. Headlights Auto-Off Timer When the ignition is turned off and all the doors are closed (headlight switch must be in the ON or AUTO mode): ☐ The headlights will turn off in 90 seconds ☐ The headlights will turn off in 60 seconds ☐ The headlights will turn off in 30 seconds (Standard) ☐ The headlights will turn off immediately when the vehicle is turned off and the driver door is opened	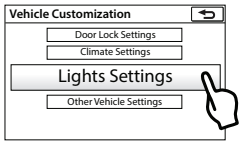	
15. Daytime Running Lights Illumination of daytime running lights: ☐ On (Standard) ☐ Off	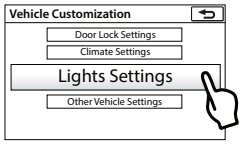	
16. Interior Lights Off Timer The interior lights can be adjusted to stay on after closing the door as follows: ☐ 30 seconds ☐ 15 seconds (Standard) ☐ 7.5 seconds ☐ Off	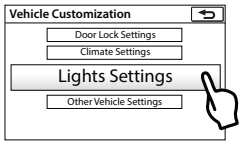	
17. Exterior Lights Off Timer The exterior lights can be adjusted to stay on after closing the door as follows: ☐ 30 seconds ☐ 15 seconds (Standard) ☐ 7.5 seconds ☐ Off	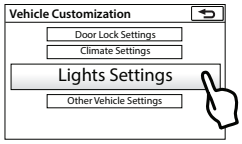	
Other Vehicle Settings		
18. Driver's Seat Easy Exit* When the vehicle is placed in park and the ignition turned off, the driver seat can be set as follows: ☐ Automatically move fully away from the steering wheel (Standard) = Full ☐ Automatically move partially away from the steering wheel = Partial ☐ Remain in the current position, as set by the driver = Off * If equipped	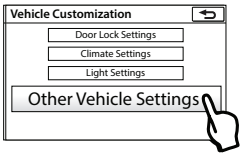	
19. Power Back Door Opening Adjustment Adjust the opening of the back door: max (standard) · large · middle · small · minimum	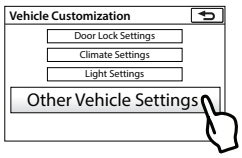	

Programmable by Dealer Only	Settings that can be customized by: Using the navigation system	Dealer
20. Access System with Electronic Key Unlock the doors with: ☐ Electronic key unlock button (deactivates Smart Access) = Off ☐ Smart Access (touch door handle) or electronic key (Standard) = On	_____	Dealer only
21. Panic Mode When pressing the panic button on the electronic key: ☐ The alarm will sound intermittently and the vehicle lights will flash (Standard) = On ☐ The alarm will not sound and the vehicle lights will not flash = Off	_____	Dealer only
22. Wireless Remote Window Operation Buzzer When option #27 is on, and the wireless remote is used to open windows: ☐ The buzzer will sound (Standard) = On ☐ The buzzer will not sound = Off	_____	Dealer only
23. Unlock on Second Key Turn When using the mechanical key to unlock the doors: ☐ Turning the key one time unlocks the driver door, and two times unlocks all doors (Standard) = On ☐ Turning the key one time will unlock all doors = Off	_____	Dealer only
24. Open Moon Roof Buzzer When the lock button on the electronic key is pressed and the moon roof is not fully closed: ☐ The buzzer will sound (Standard) = On ☐ The buzzer will not sound = Off	_____	Dealer only
25. Close Windows and Moon Roof with Mechanical Key When using the mechanical key to operate windows and moon roof: ☐ Turning the key right and holding the position for 2 seconds will not close the windows and moon roof (Standard) = Off ☐ Turning the key right and holding the position for 2 seconds will close the windows and moon roof = On	_____	Dealer only
26. Open Windows and Moon Roof with Mechanical Key When using the mechanical key to operate windows and moon roof: ☐ Turning the key left and holding the position for 2 seconds will not open the windows and moon roof (Standard) = Off ☐ Turning the key left and holding the position for 2 seconds will open the windows and moon roof = On	_____	Dealer only
27. Open Windows and Moon Roof with Electronic Key When pressing the unlock button on the electronic key for 3 seconds: ☐ The windows and moon roof will not open (Standard) = Off ☐ All the windows and moon roof will open = On	_____	Dealer only
28. Slide/Tilt Moon Roof with Mechanical Key When option #26 is on, the moon roof can be programmed to: ☐ Slide (Standard) ☐ Tilt	_____	Dealer only
29. Slide/Tilt Moon Roof with Electronic Key When option #27 is on, the moon roof can be programmed to: ☐ Slide (Standard) ☐ Tilt	_____	Dealer only

Programmable by Dealer Only (cont'd)	Settings that can be customized by: Using the navigation system	Dealer
30. Interior Light The interior light will illuminate when POWER is switched to Off: ☐ On (Standard) ☐ Off	_____	Dealer only
31. Illumination of the Interior Cabin Light when Unlocking Door Illumination of the interior cabin light when using the electronic or mechanical key to unlock the door can be programmed as follows: ☐ The cabin light will illuminate (Standard) = On ☐ The cabin light will not illuminate = Off	_____	Dealer only
32. Illumination of the Interior Cabin Light when Approaching the Vehicle Illumination of the interior cabin light when vehicle is approached with the electronic key can be programmed as follows: ☐ The cabin light will illuminate (Standard) = On ☐ The cabin light will not illuminate = Off	_____	Dealer only
33. Illumination of the Outer Foot Lights when Approaching the Vehicle Illumination of the outer foot lights when vehicle is approached with the electronic key can be programmed as follows: ☐ The outer foot lights will illuminate (Standard) = On ☐ The outer foot lights will not illuminate = Off	_____	Dealer only
34. Illumination of the Outer Foot Lights when a Door is Opened Illumination of the outer foot lights when a door is opened can be programmed as follows: ☐ The foot lights will illuminate (Standard) = On ☐ The foot lights will not illuminate = Off	_____	Dealer only
35. Lane Change Signal Flashes Push the turn signal lever partway to signal a lane change. It will flash: ☐ Off ☐ 3 times (Standard) ☐ 4 times ☐ 5 times ☐ 6 times ☐ 7 times	_____	Dealer only
36. Instrument Dimming Sensitivity Level of light at which the instrument panel lights will dim: very dark · dark · normal (standard) · light · very light	_____	Dealer only
37. Instrument Restore Sensitivity Level of light at which the instrument panel lights will brighten: very light · light · normal (standard) · dark · very dark	_____	Dealer only
38. Tilt Away of Steering Wheel When vehicle is shifted into park and ignition turned off, steering wheel can be set as follows: ☐ Automatically move up and away from the driver position setting (Standard) = On ☐ Remain in the current position, as set by the driver = Off	_____	Dealer only
39. Moon Roof Switch - Auto Operation Pressing the open/close switch will automatically open or close the moon roof in one motion: ☐ On (Standard) ☐ Off	_____	Dealer only

Programmable by Dealer Only (cont'd)	Settings that can be customized by: Using the navigation system	Dealer
40. Efficient Ventilation Mode When the front defogger is activated: ☐ It will automatically blow air onto the windshield without engaging the air conditioner compressor = Off ☐ It will automatically engage the air conditioner compressor to blow air onto the windshield (Standard) = On	_____	Dealer only
41. Linking Seat Position Memory with Door Unlock* When using Smart Access to unlock the doors, seat position memory recall can be programmed as follows: ☐ The driver seat will move to memory position when the driver door is unlocked (Standard) ☐ The driver seat will move to memory position when any door is unlocked * If equipped	_____	Dealer only
42. Power Back Door Switch Operation The back door opener button can be programmed as follows: ☐ Press button one time to open back door ☐ Press and hold the button for 0.8 seconds to open the back door (Standard)	_____	Dealer only
43. Opening Back Door using Back Door Button The back door opener button on the back door can be programmed as follows: ☐ Pressing button will not automatically open back door = Off ☐ Pressing button will automatically open back door (Standard) = On	_____	Dealer only
44. Power Back Door / Touchless Sensor* The power back door opens when holding a hand over or touching the upper part of the rear emblem: ☐ Off ☐ Power back door On; touchless sensor Off ☐ On (Standard) * If equipped	_____	Dealer only
45. Power Back Door / Touchless Sensor* Sensitivity The sensitivity of the touchless sensor on the power back door can be adjusted as follows: ☐ Low (Standard) ☐ Medium ☐ High * If equipped	_____	Dealer only
46. Back Door Chime The chime that sounds when opening the back door can be programmed as follows: ☐ Off ☐ Start buzzer On; in-operation buzzer Off (Standard) ☐ Start buzzer Off; in-operation buzzer On ☐ On	_____	Dealer only
47. Automatic Closing of the Back Door when Lowered Back door will automatically close when partially lowered: ☐ Off ☐ On (Standard)	_____	Dealer only
48. Automatic Mirror Fold/Extend Automatic mirror folding and extending operation can be programmed as follows: ☐ Linked to operation of the engine switch = ACC ☐ Linked to the locking/unlocking of the doors (Standard) = Door lock ☐ Off * If equipped	_____	Dealer only

Date _____ Customer Signature _____

_____ _____

Repair Order Number (Dealer only) Vehicle Identification Number (Dealer only)